



ASSEMBLY INSTRUCTIONS

DOUBLE SHOT® ARCADE BASKETBALL SYSTEM

MODEL 90648

BEFORE ASSEMBLY:

- 2+ people recommended for setup
 - Videos and help guides available
- Scan the code below to see how it all comes together.



<http://go.lifetime.com/90648playlist>



CAUTION – ELECTRICALLY OPERATED PRODUCT – Not recommended for Children under 3 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock.

WARNING – ADULT ASSEMBLY REQUIRED:
Small parts, sharp edges and points may be present during assembly.

THIS PRODUCT IS INTENDED FOR INDOOR USE ONLY.

TOOLS REQUIRED

 
 
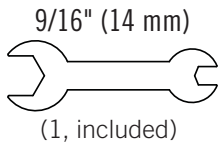 


TABLE OF CONTENTS

Icon Legend.....	2
Warnings & Notices.....	3
Frame Assembly.....	4
Backboard to Rim Assembly.....	9
Parts Identifier.....	i-iv
Ramp Assembly.....	13
Adjusting the System.....	20
Maintenance.....	21
Registration.....	21
Warning Stickers.....	22
Warranty.....	23

QUESTIONS?

CONTACT LIFETIME CUSTOMER SERVICE:

Call: **1-800-225-3865**
7:00 am–5:00 pm (Monday–Friday) MST
and 9:00 am–1:00 pm Saturday MST

Live Chat: www.lifetime.com
(click on "Ask An Expert" tab)
Video Instructions:
www.youtube.com/lifetimeproducts

For Customer Service in Mainland Europe and the United Kingdom,
E-mail: cs@lifetimeproducts.eu

MODEL# AND PRODUCT ID
(you will need both when contacting us)
Model Number: **90648**
Product ID:



ICON LEGEND



- Indicates special heed should be taken when reading.



- Indicates the parts to be used for a section.



- Indicates no parts required for a specific section.



- Indicates the hardware to be used for a section.



 
- Indicates no hardware required for a specific page.



- Indicates the tools to be used for a section.



- Indicates to use/not to use an electric drill for a specific step.

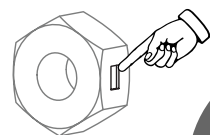

- Indicates the use of a Centerlock Nut. A Nut with this marking will require some effort to tighten. This hardware was designed with this feature in order to prevent loosening later.

Y

COPY



WARNINGS & NOTICES



SAFETY INSTRUCTIONS



FAILURE TO FOLLOW THESE WARNINGS MAY RESULT IN SERIOUS INJURY OR PROPERTY DAMAGE AND WILL VOID WARRANTY.

Owner must ensure that all players know and follow these rules for safe operation of the system.

To ensure safety, do not attempt to assemble this product without following the instructions carefully. Check entire box and inside all packing material for parts and/or additional instruction material. Before beginning assembly, read the instructions and identify parts using the hardware identifier and parts list in this document. Proper and complete assembly, use and supervision are essential for proper operation and to reduce the risk of accident or injury. A high probability of serious injury exists if this product is not installed, maintained, and operated properly.

- If using a ladder during assembly, use extreme caution.
- Two capable adults are recommended for this operation.
- Assemble the pole sections properly. Failure to do so could cause the pole sections to separate during play or transport.
- The power adaptor should be periodically examined for potential hazards.
- Any potentially hazardous parts must be repaired or replaced immediately.
- Do not allow the system or any of the components to get wet. Keep the system in a climate-controlled low-humidity environment.

Most injuries are caused by misuse and/or not following instructions. Use caution when using this product.

ELECTRICAL RATING 5.9V — Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.

⚠ CAUTION – UPRIGHT STORAGE OF THE PRODUCT:

When storing the Double Shot Arcade Basketball System in the upright position, make sure the back of the backboard is up against a wall or other reasonable support to prevent the system from falling over, which could result in personal injury or property damage.

 
1

FRAME ASSEMBLY




HARDWARE REQUIRED


Hardware Blister Pack

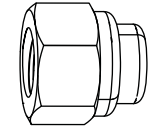


EUA (x9)

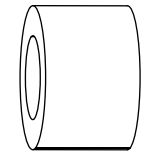 


ETY (x2)

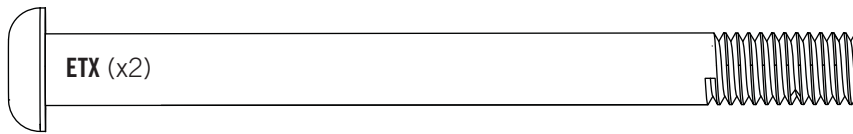 


ETX (x2)

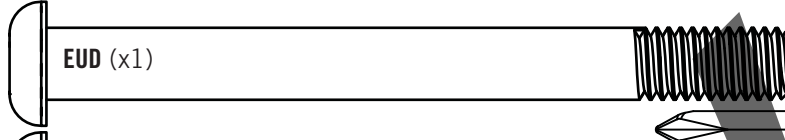 

EUD (x1)

 


EUC (x3)

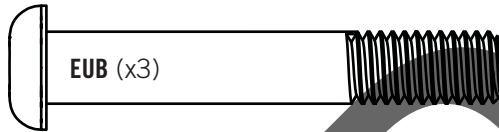 


EUB (x3)



 
BMK (x2)

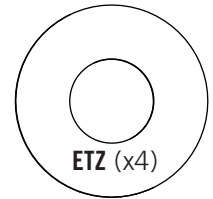


ETZ (x4)

 


EYF (x1)

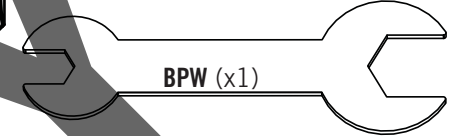 

BPW (x1)

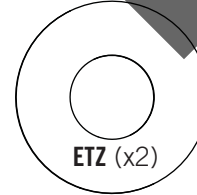 

ETZ (x2)

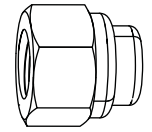 

EUA (x2)

 


PARTS REQUIRED


Metal Parts




BMA (x1)




EXV (x1)

 


BMB (x2)

 


BMC (x2)

 


BLY (x2)

 

BMF (x2)

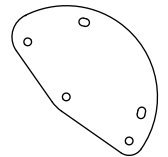 

BLT (x2)

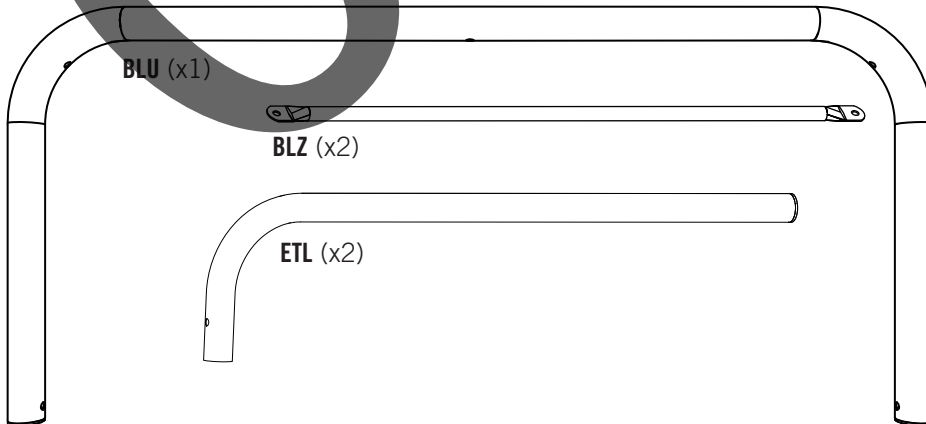 


BLU (x1)

BLZ (x2)

ETL (x2)



 TOOLS REQUIRED




9/16" (14 mm)
BPW (x1)




EYF (x1)

SECTION 1 (CONTINUED)

 
TOOLS AND HARDWARE REQUIRED




EYF (x1)

 


BPW (x1)
9/16" (14 mm)

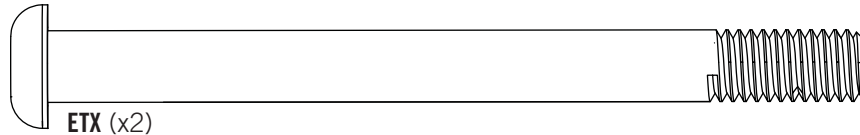 


ETX (x2)

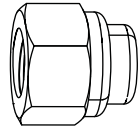 

EUA (x2)

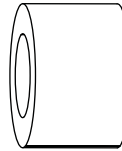 

ETY (x2)

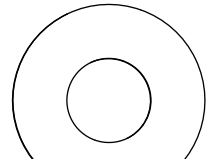 


ETZ (x2)




- If you have trouble with this section, scan the QR code below to view the assembly video.

1.1

 - Attach the **Bottom Brace (BLU)** to the **Right Bottom Leg (BMA)** and **Left Bottom Leg (EXV)** with the hardware shown.

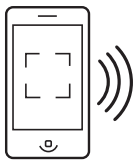


 - <http://go.lifetime.com/doubleshot-frame>

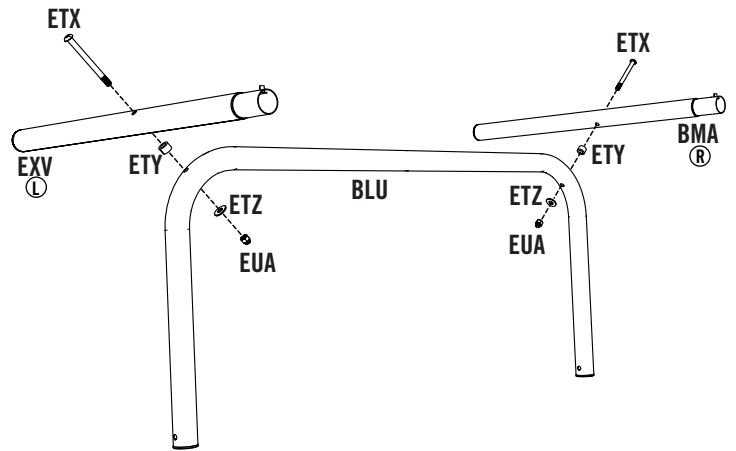


1.2

 - Attach the **Bottom Legs (BMA & EXV)** to the **Rear Top Leg Assemblies** as shown. Press down on the push button and insert the swaged end of the **Rear Bottom Leg** into the **Rear Middle Leg (BMB)** until the push button snaps into the hole.

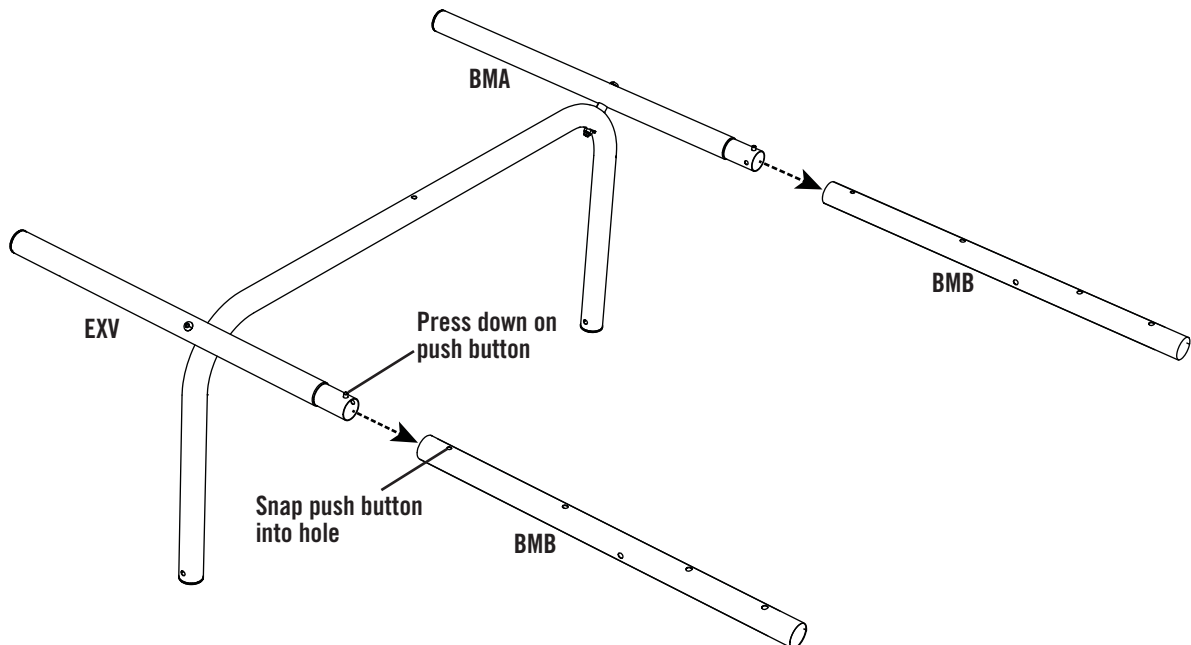


SECTION 1 (CONTINUED)

 
TOOLS AND HARDWARE REQUIRED




EYF (x1)

 


BPW (x1)
9/16" (14 mm)

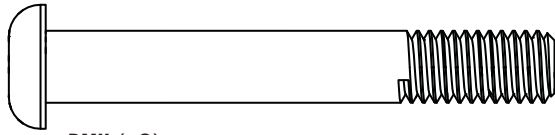 

BMK (x2)

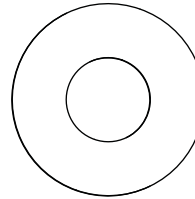 


ETZ (x2)

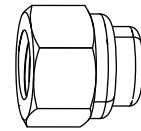 

EUA (x2)

1.3

 
- Align the holes in the **Top Arm (ETL)** and **Rear Top Leg (BMC)**, then secure them with the hardware shown. Only finger-tighten the hardware for now.

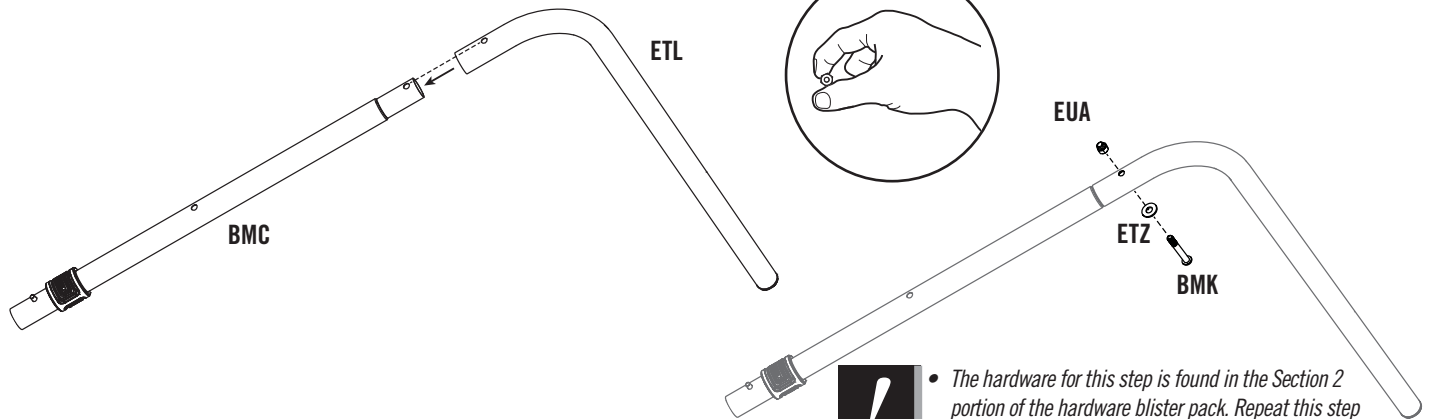


- The hardware for this step is found in the Section 2 portion of the hardware blister pack. Repeat this step to assemble the remaining Top Arm and Rear Top Leg.

1.4

 - Attach the Rear Top Leg Assemblies to **Rear Middle Leg (BMB)** as shown. Press down on the push button and insert the swaged end of the Rear Top Leg into the **Rear Middle Leg (BMB)** until the push button snaps into the hole indicated.





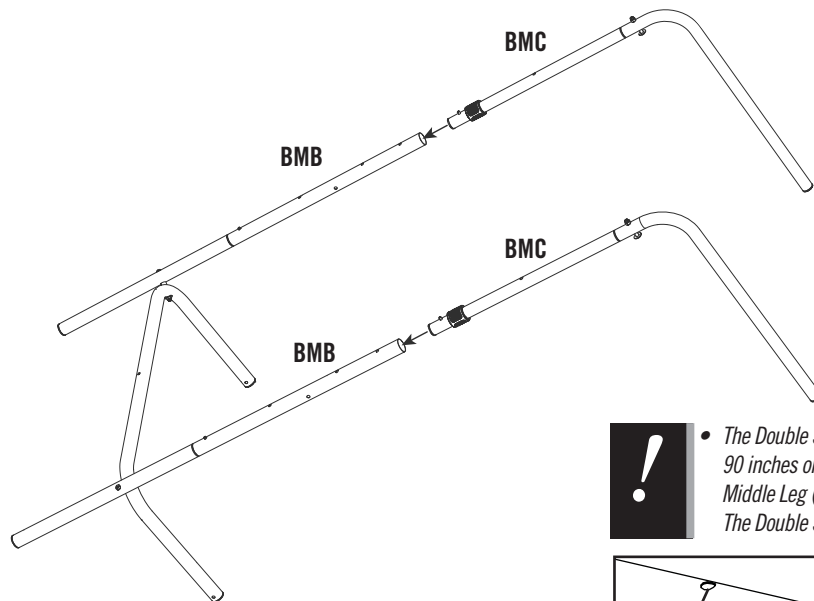


 - The Double Shot Arcade Basketball System has two height settings. For ceilings that are 90 inches or more from the floor, set the push button to rest in the first hole in the Rear Middle Leg (BMB). For ceilings between 84 and 90 inches, use the second hole. The Double Shot was not intended for use with ceilings under 84 inches.

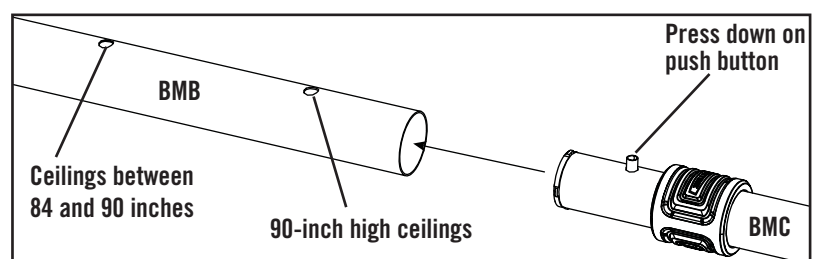


SECTION 1 (CONTINUED)

     TOOLS AND HARDWARE REQUIRED

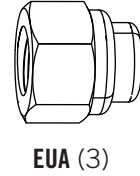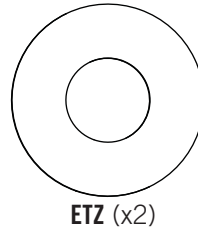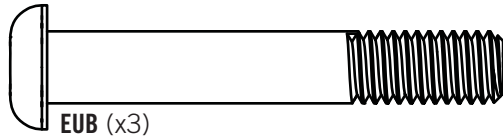


1.5

 - Attach the **Rear Cross Braces (BLZ)** to the Rear Leg Assemblies and the **Bottom Brace (BLU)** with the hardware shown.

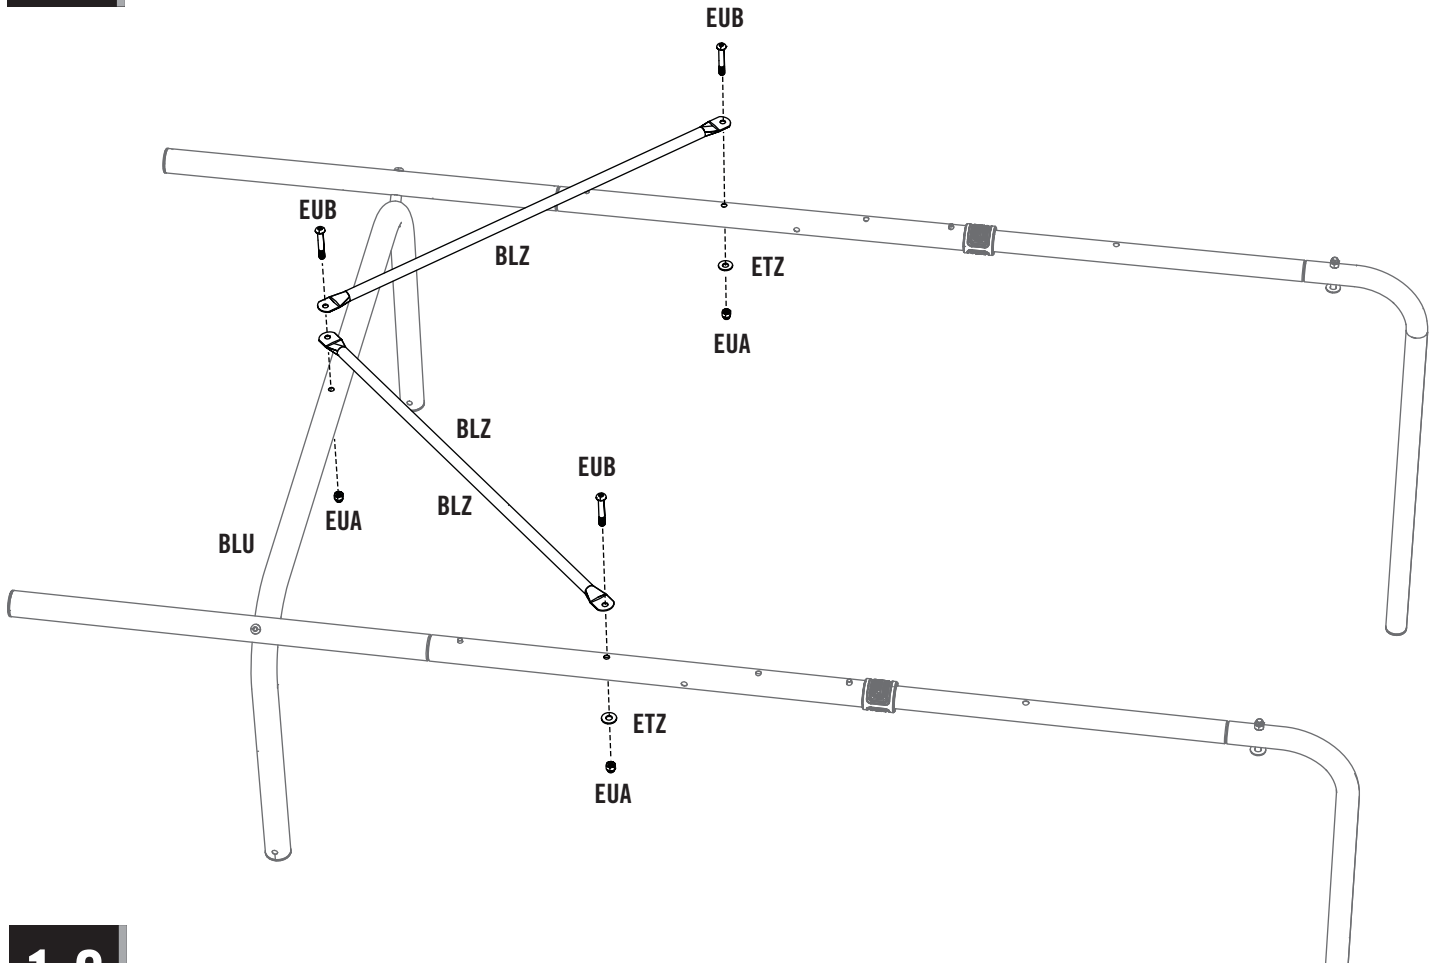


1.6

 - Press down on the push button on the **Side Leg (BMF)** and insert the swaged end of it into the **Upper Side Leg (BLY)** until the push button snaps into the hole indicated. Repeat this step to complete the other Side Leg Assembly.

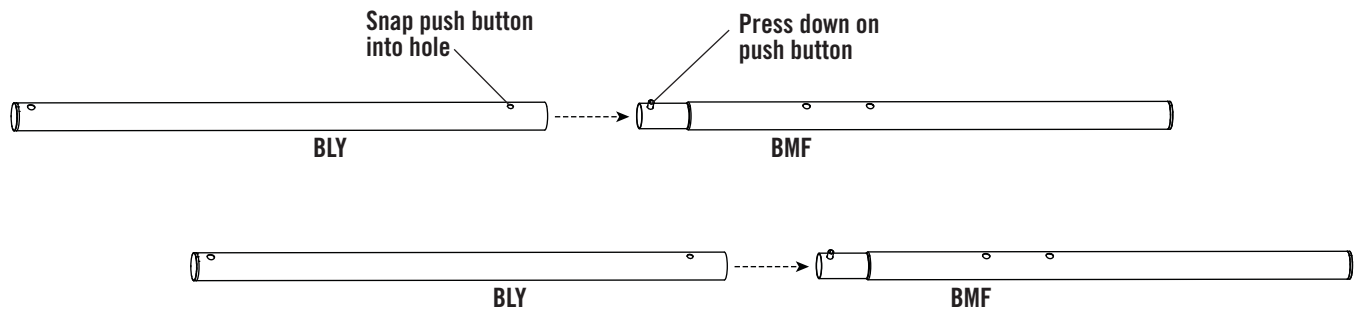


SECTION 1 (CONTINUED)

 
TOOLS AND HARDWARE REQUIRED




EYF (x1)

 


BPW (x1)
9/16" (14 mm)

 

EUC (x3)

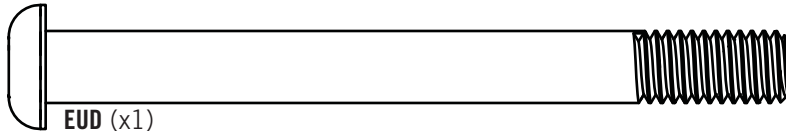 


EUD (x1)

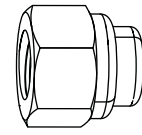 

EUA (x4)


1.7

 - Turn the Frame over and attach the Side Leg Assembly to the frame with the hardware as shown.

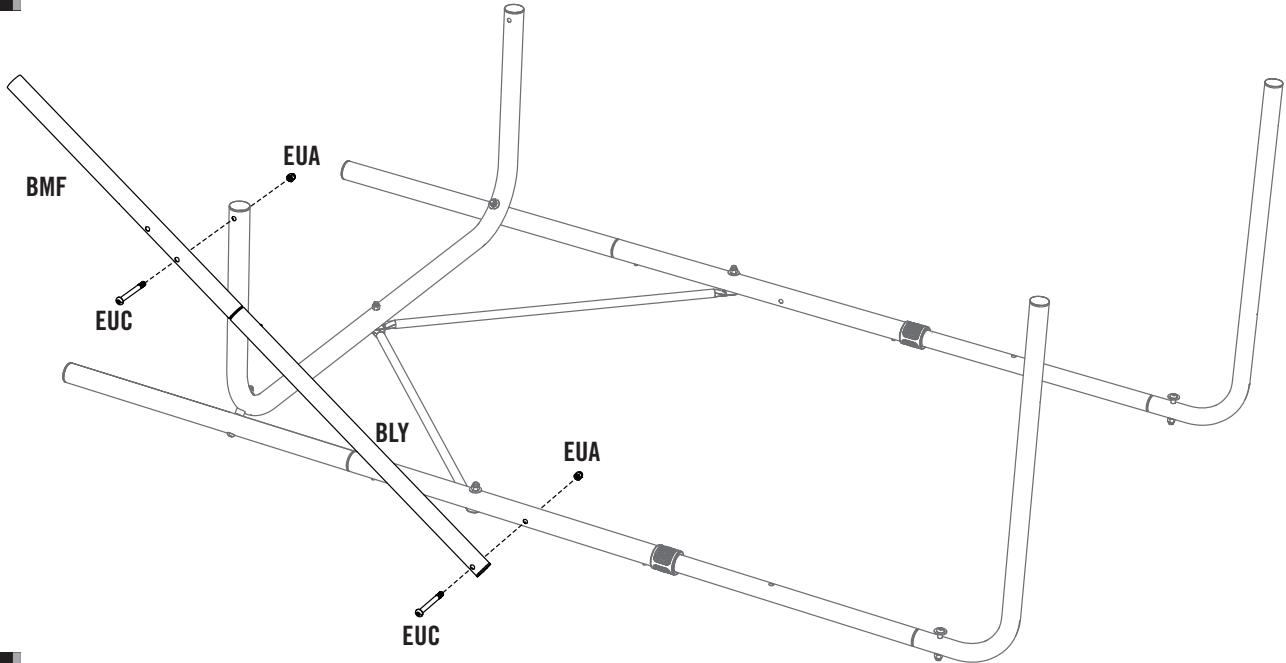

1.8

 - Attach the other Side Leg Assembly. Attach a **Fold-Up Plate (BLT)** to each side of the **Bottom Brace (BLU)**.

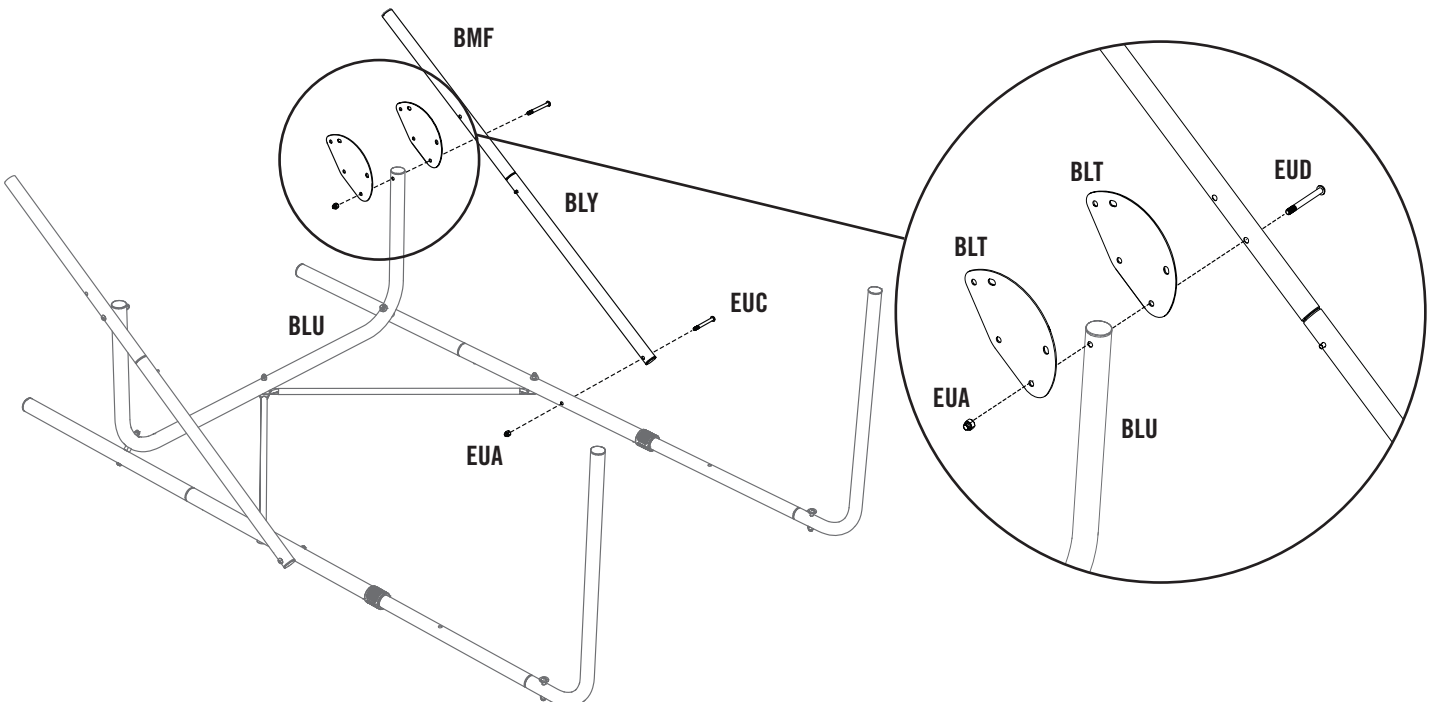


2

BACKBOARD TO RIM ASSEMBLY




HARDWARE REQUIRED

 
Hardware Blister Pack

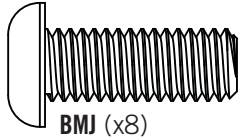


BMJ (x8)

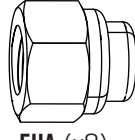 


EUA (x8)

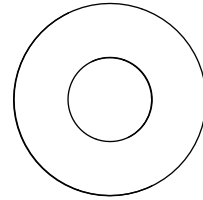 

ETZ (x8)

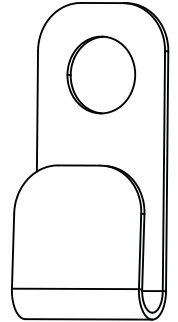 


BMN (x2)

 

BNZ (x4)



 BOA (x4)




EUE (x8)




PARTS REQUIRED

 
Plastic Parts

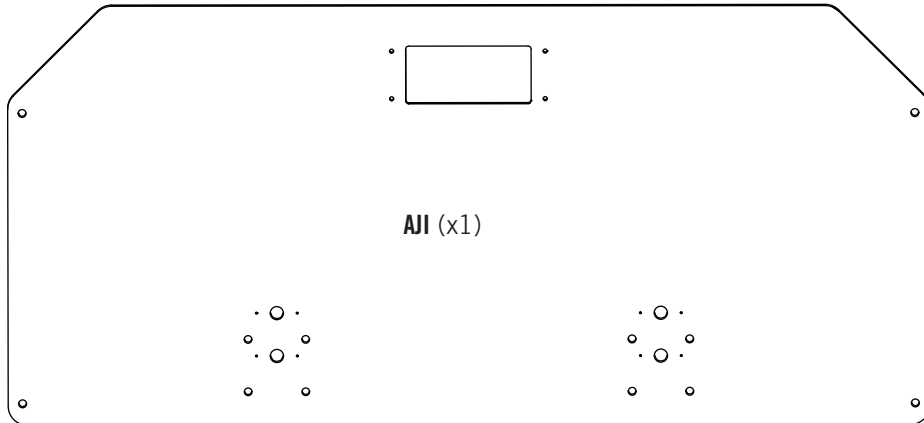

AJI (x1)

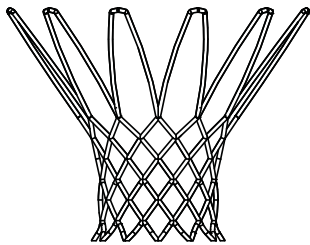 

AKZ (x2)

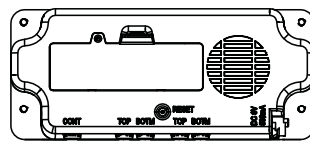 


BLQ (x1)



EYB (x4)

 
Metal Parts

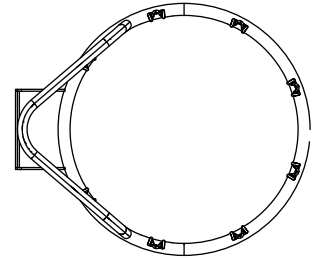

ALX (x2)



 TOOLS REQUIRED

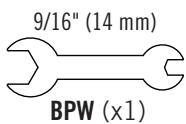

BPW (x1)



(1)



(1)



 
EYF (x1)

SECTION 2 (CONTINUED)

TOOLS AND HARDWARE REQUIRED




- If you have trouble with this section, scan the code below to view a video on its assembly.

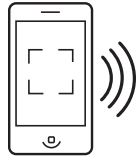

- <http://go.lifetime.com/doubleshot-backboard>



2.1

 - Remove and discard the plastic shield from the **Electronic Scoreboard (BLQ)**, and snap the four **Sensors (EYB)** into place as shown.



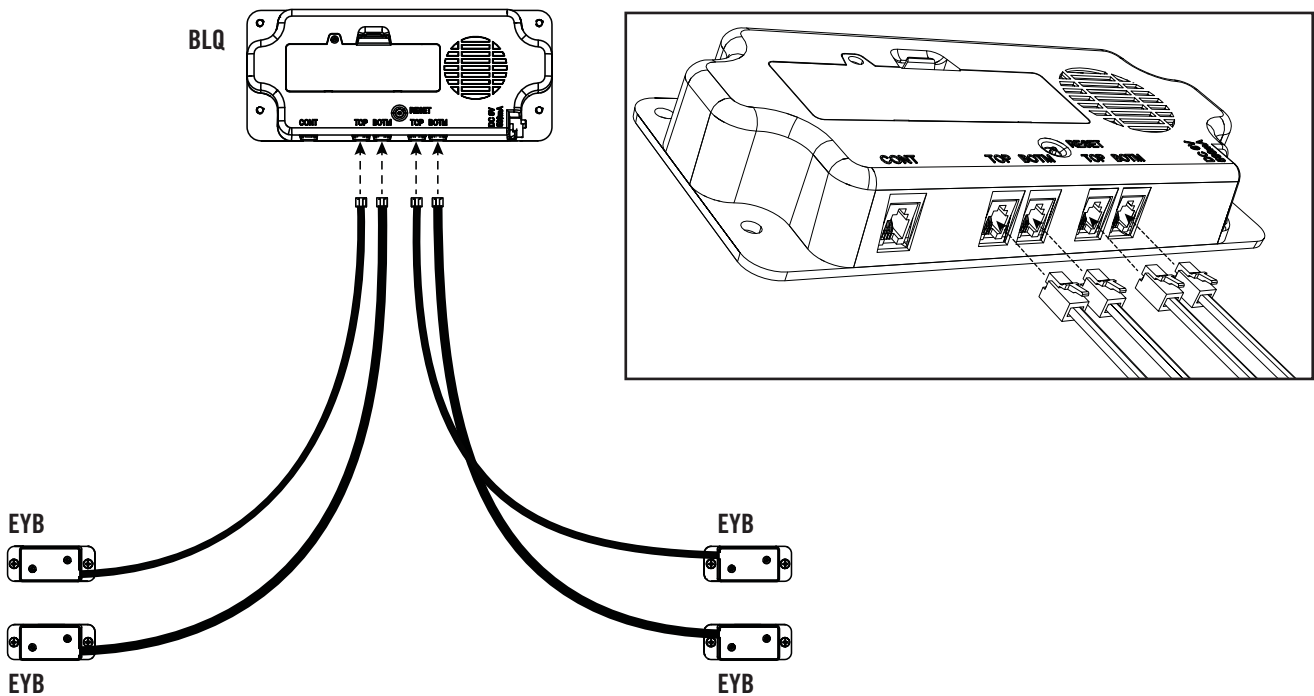


SECTION 2 (CONTINUED)

  TOOLS AND HARDWARE REQUIRED




BPW (x1)
9/16" (14 mm)

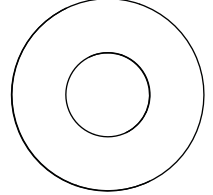   

2.2

 
- Attach the Electronic Scoreboard and Sensors to the **Backboard (AJI)**.

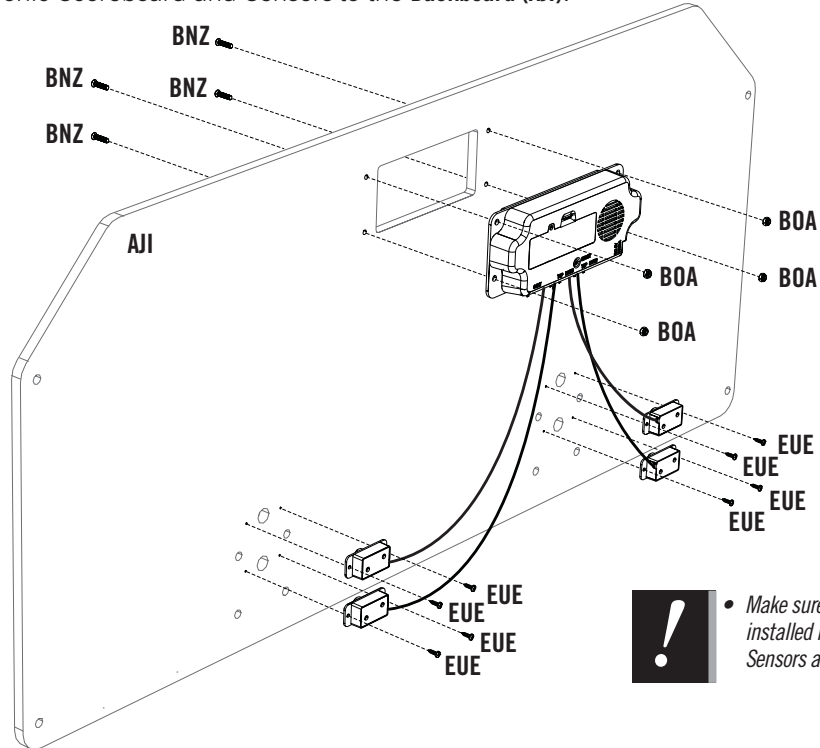

- Make sure the digital display is installed right side up, and the Sensors are oriented as shown.

2.3

 
- Attach **Rims (ALX)** to the **Backboard (AJI)** with the hardware shown.

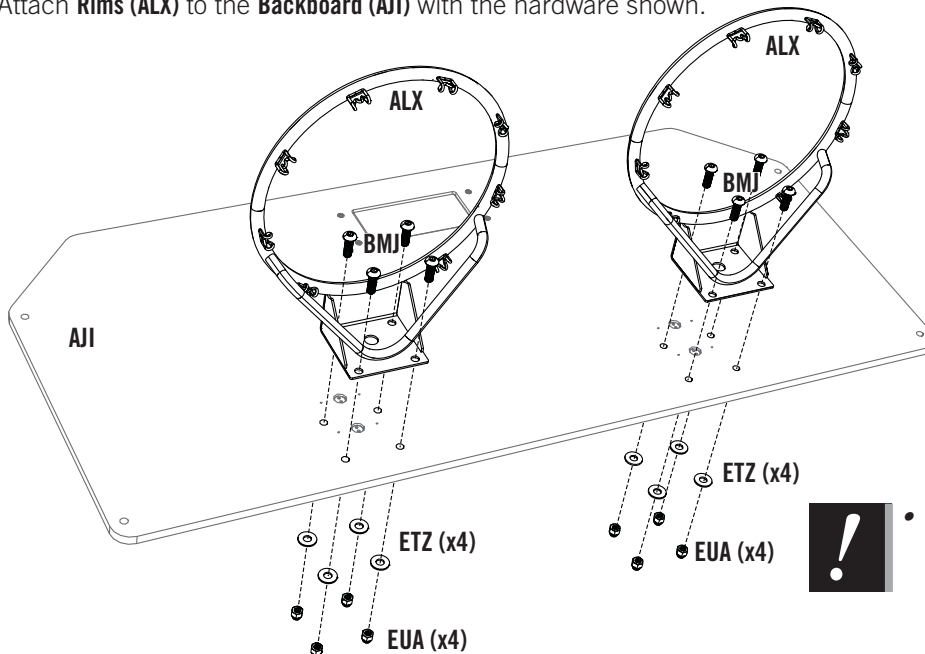


- Do not overtighten the Cap Nut.

SECTION 2 (CONTINUED)

 
TOOLS AND HARDWARE REQUIRED



EYF (x1)

 


BPW (x1)
9/16" (14 mm)

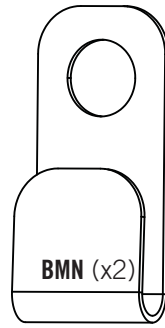 


BMN (x2)

2.4

 - Remove the hardware shown.

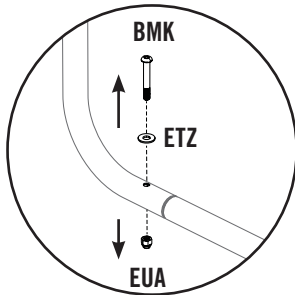


- Remove the hardware shown

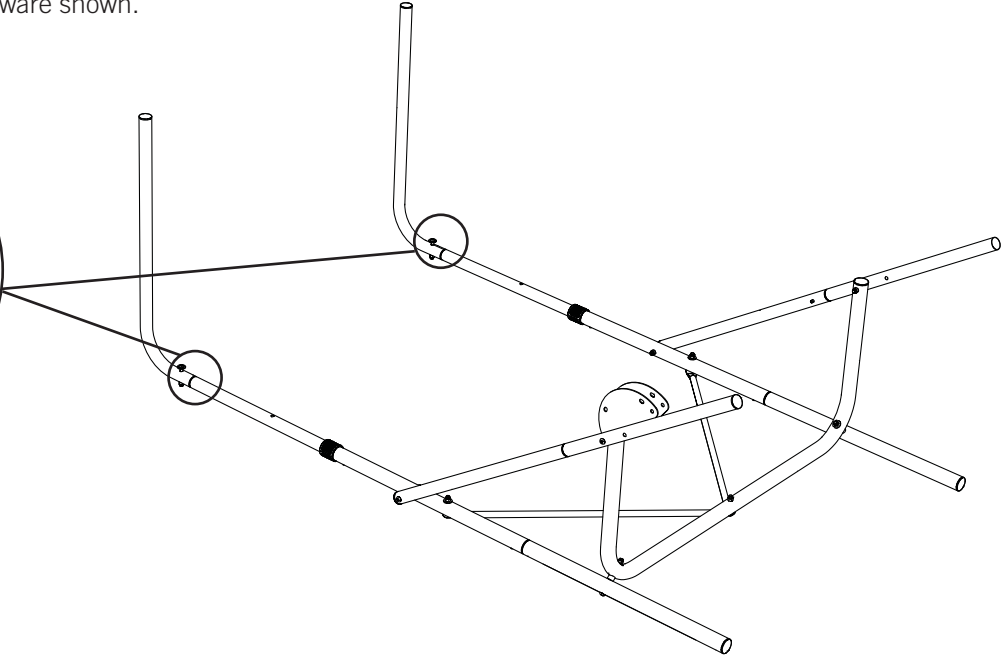 

2.5

 - Place the backboard in position on the frame, then reattach the hardware from the previous step, adding a Retaining Hook (BMN) between the Cap Nut (EUA) and the back of the tube.

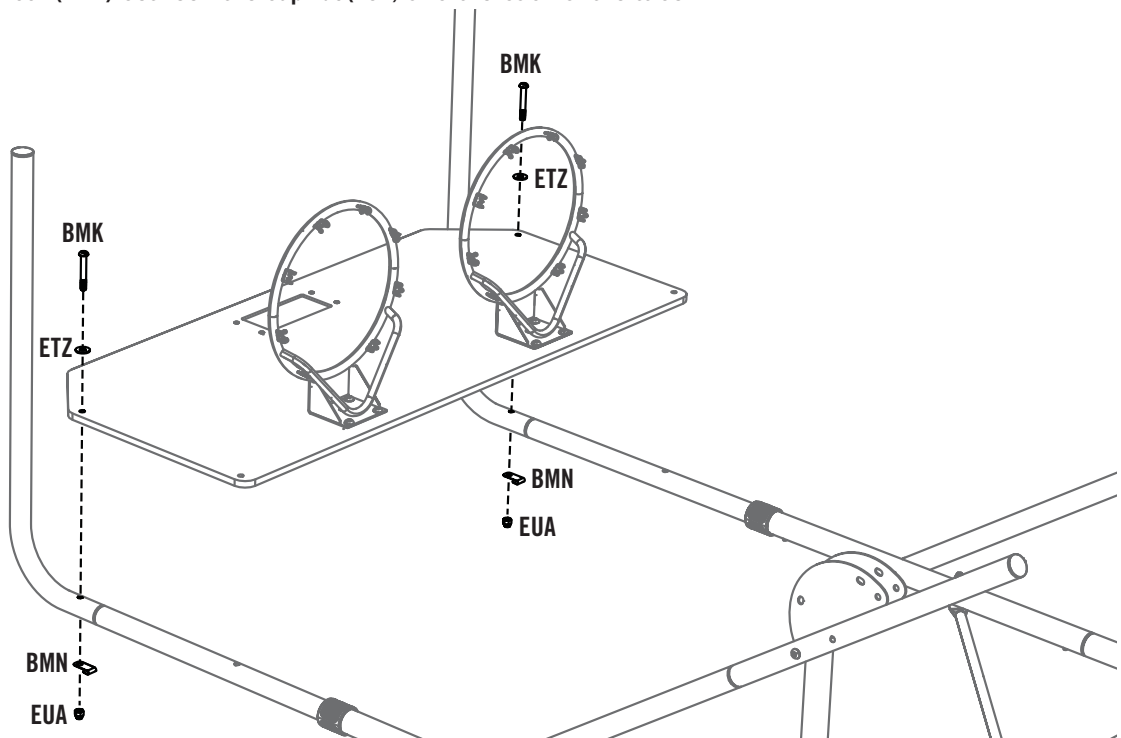


► SECTION 2 (CONTINUED)

TOOLS AND HARDWARE REQUIRED




2.6

 - Attach the **Nets (AKZ)** to the **Rims (ALX)**.

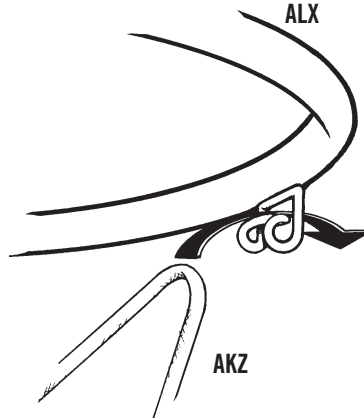

2.7

 - With the help of another adult, rotate the Rear Frame Assembly upright as shown.

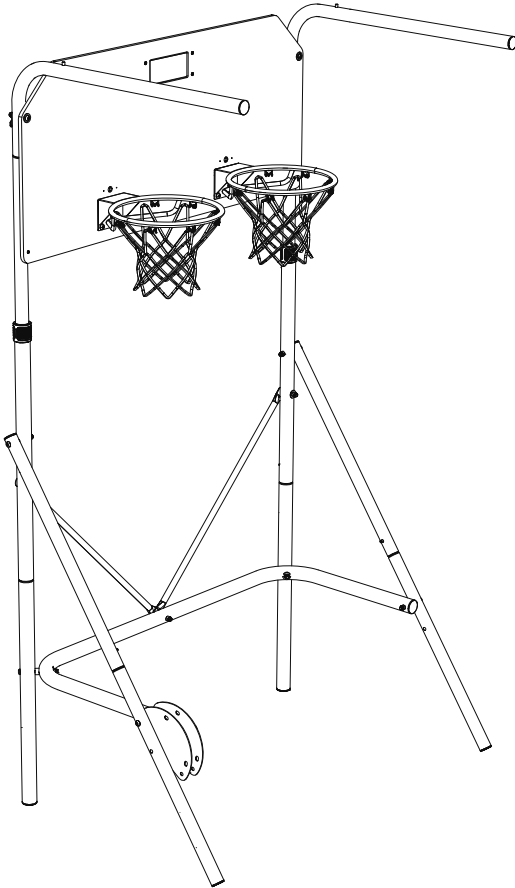

- *The Double Shot Arcade Basketball System has two height settings. Make sure the Frame has been adjusted to the proper height setting for your ceiling. See Step 1.4 for more details.*

 
3

RAMP ASSEMBLY



HARDWARE REQUIRED


Hardware Blister Pack

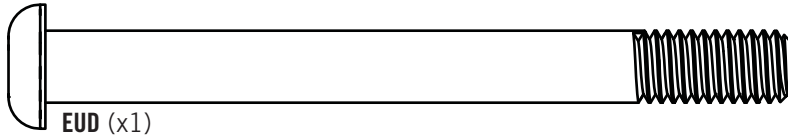


EUD (x1)



 
EUR (x1)

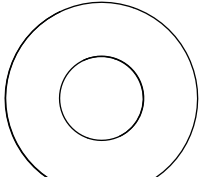


ETZ (x2)

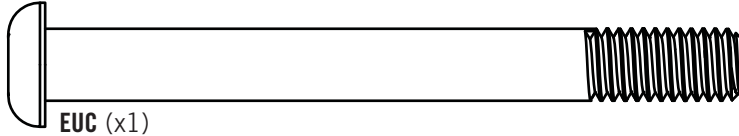 


EUC (x1)

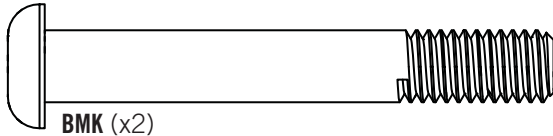 


BMK (x2)

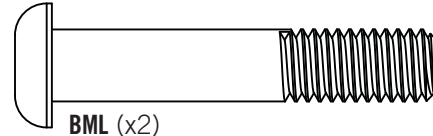 


BML (x2)

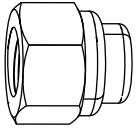 

EUA (x6)

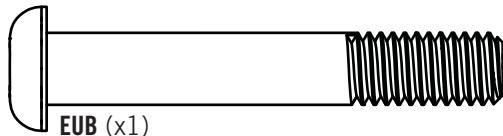 

EUB (x1)

 


BOB (x2)




PARTS REQUIRED

 
Metal Part




BLV (x2)

 


BOF (x1)

 

BMD (x1)

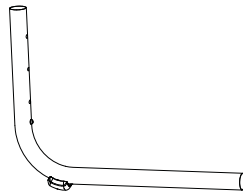 

BLX (x2)

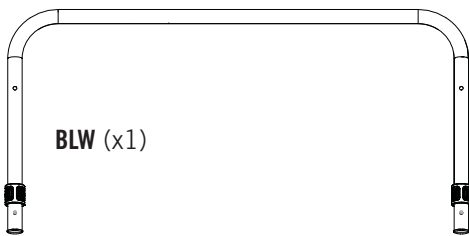 

BLW (x1)

 
Plastic Parts




EUQ (x1)




BLP (x6)



BLR (x1)

 


BQB (x1)

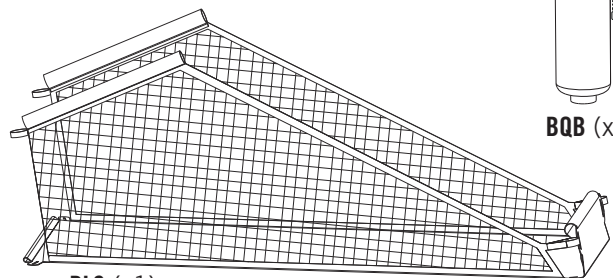 

BLS (x1)



 
TOOLS REQUIRED

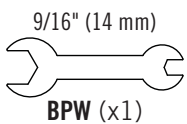

BPW (x1)



 (1)



(1)



EYF (x1)



PARTS IDENTIFIER

This page intentionally left blank

 
Remove this section to reference during assembly

Remove This Section




PARTS IDENTIFIER


Metal Parts




BMA (x1)

 

BMC (x2)

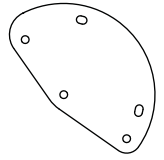 


BLT (x2)

 


EXV (x1)



 
BLY (x2)




BMB (x2)

 


BMF (x2)

 


BOF (x1)

 


BMD (x1)

 

BLV (x2)

 

BLZ (x2)

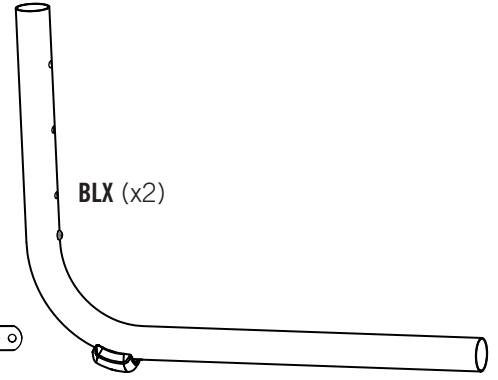 

BLX (x2)

 


ETL (x2)

Remove This Section



BLW (x1)

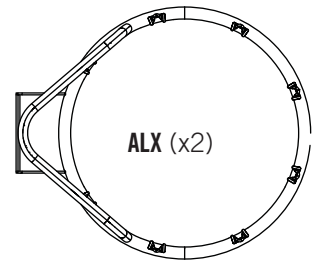

ALX (x2)

 


BLU (x1)




PARTS IDENTIFIER


Plastic Parts

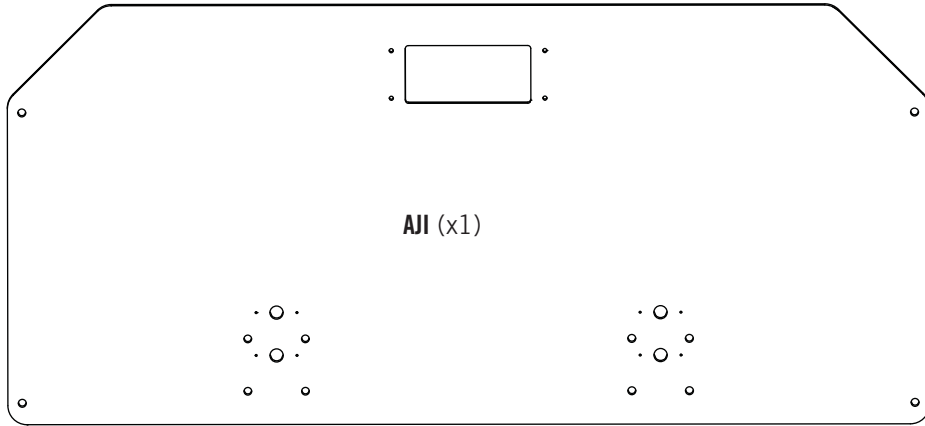


AJI (x1)

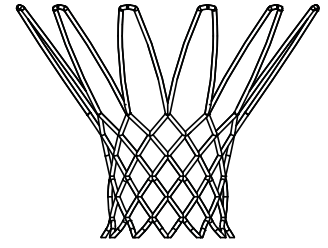 


AKZ (x2)

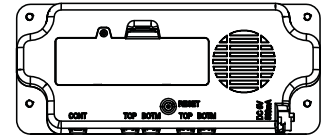 

BLQ (x1)

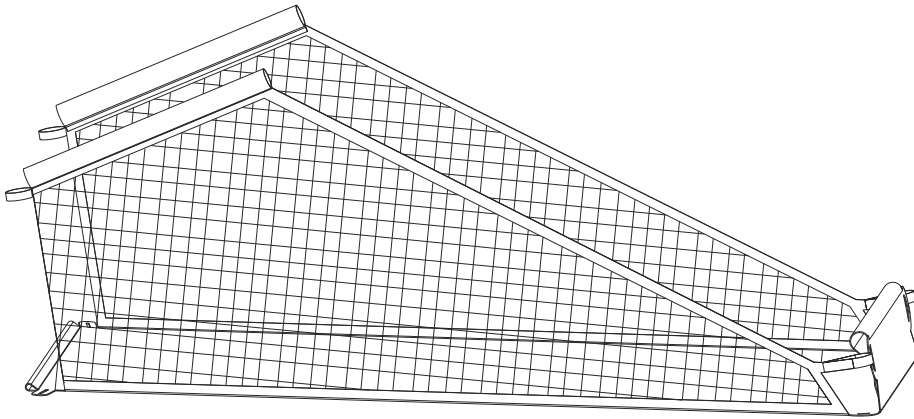 

BLS (x1)

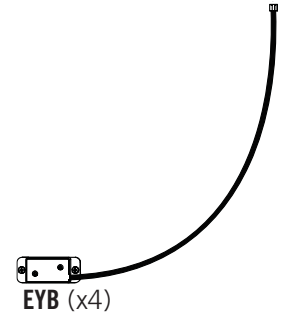 

EYB (x4)



 
EUQ (x1)



BLP (x6)



BLR (x1)



BQB (x1)

Remove This Section



HARDWARE REQUIRED





This page intentionally left blank

Remove this section to reference during assembly

 
Remove This Section

▶ SECTION 3 (CONTINUED)

TOOLS AND HARDWARE REQUIRED




- If you have trouble with this section, scan the code below to view a video on its assembly.

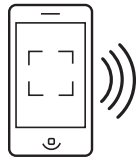

- <http://go.lifetime.com/doubleshot-ramp>

3.1

 - Slide the **Lean Bar (BLW)** through the sleeve of the **Ball Return Ramp (BLS)** with the the Push Buttons on the Lean Bar facing the Canvas Ramp as shown.

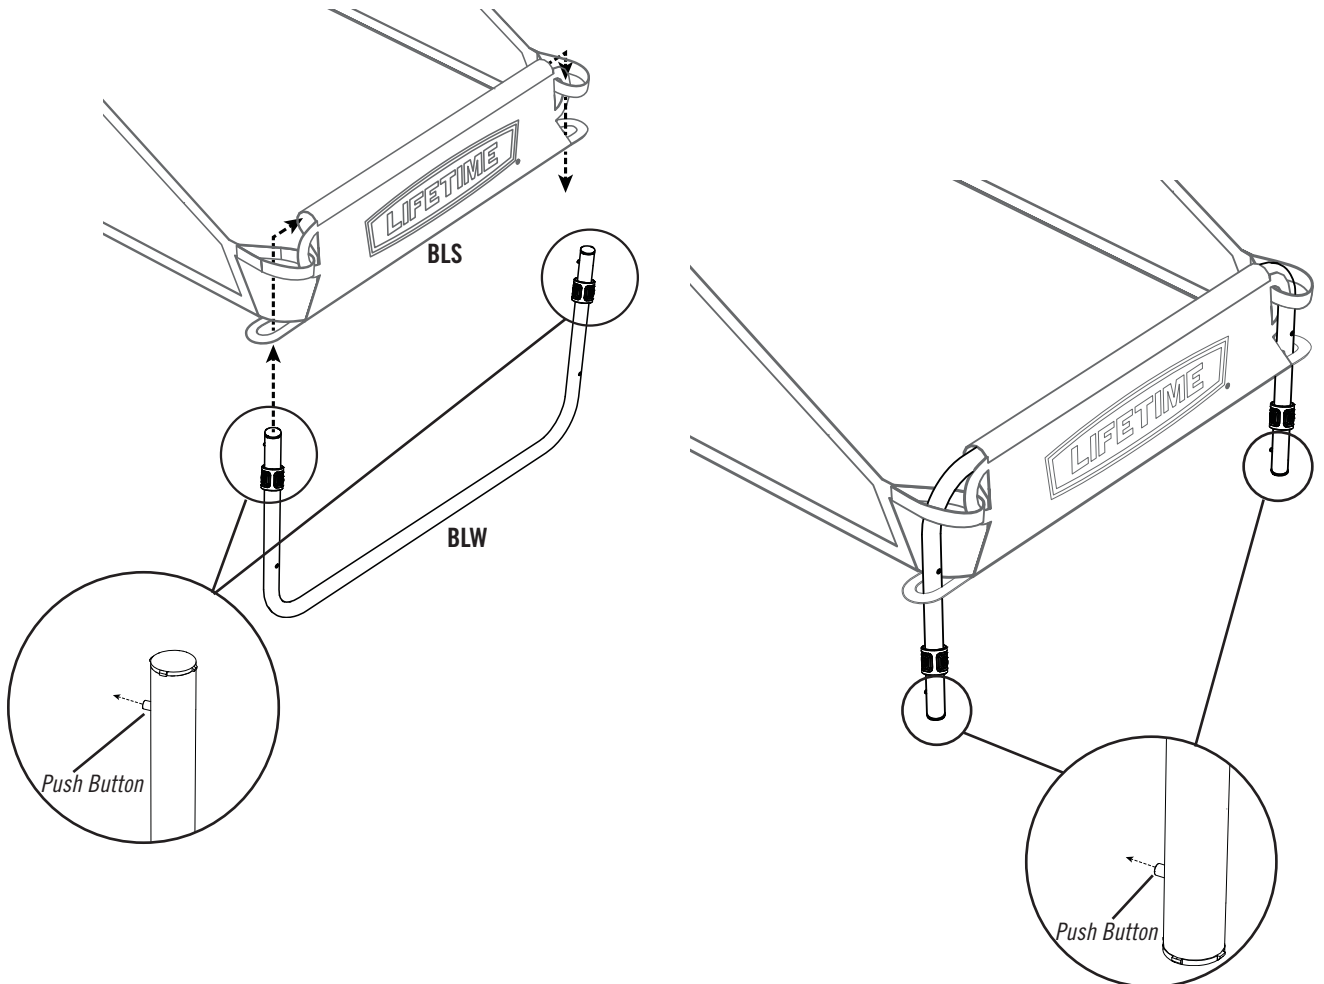


SECTION 3 (CONTINUED)

TOOLS AND HARDWARE REQUIRED




3.2

 - Insert the **Side Rail with Push Button (BMD)** and **Side Rail without Push Button (BOF)** into the **Front Legs (BLX)** until the push buttons snap into the holes indicated.

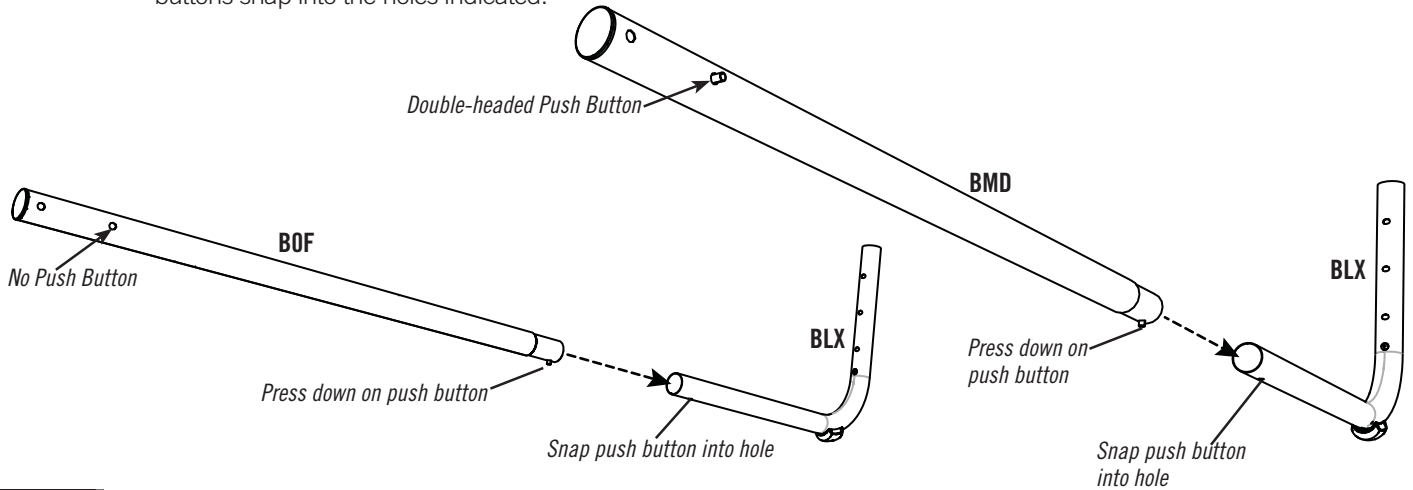

3.3

 
- Press down on the push buttons on the Front Leg Assemblies and insert the swaged ends of the Front Leg Assemblies into the **Lean Bar (BLW)** until the push buttons snap into the holes indicated. **Clip the Straps** together through the loops on both sides of the Ball Return Ramp near the sleeve.

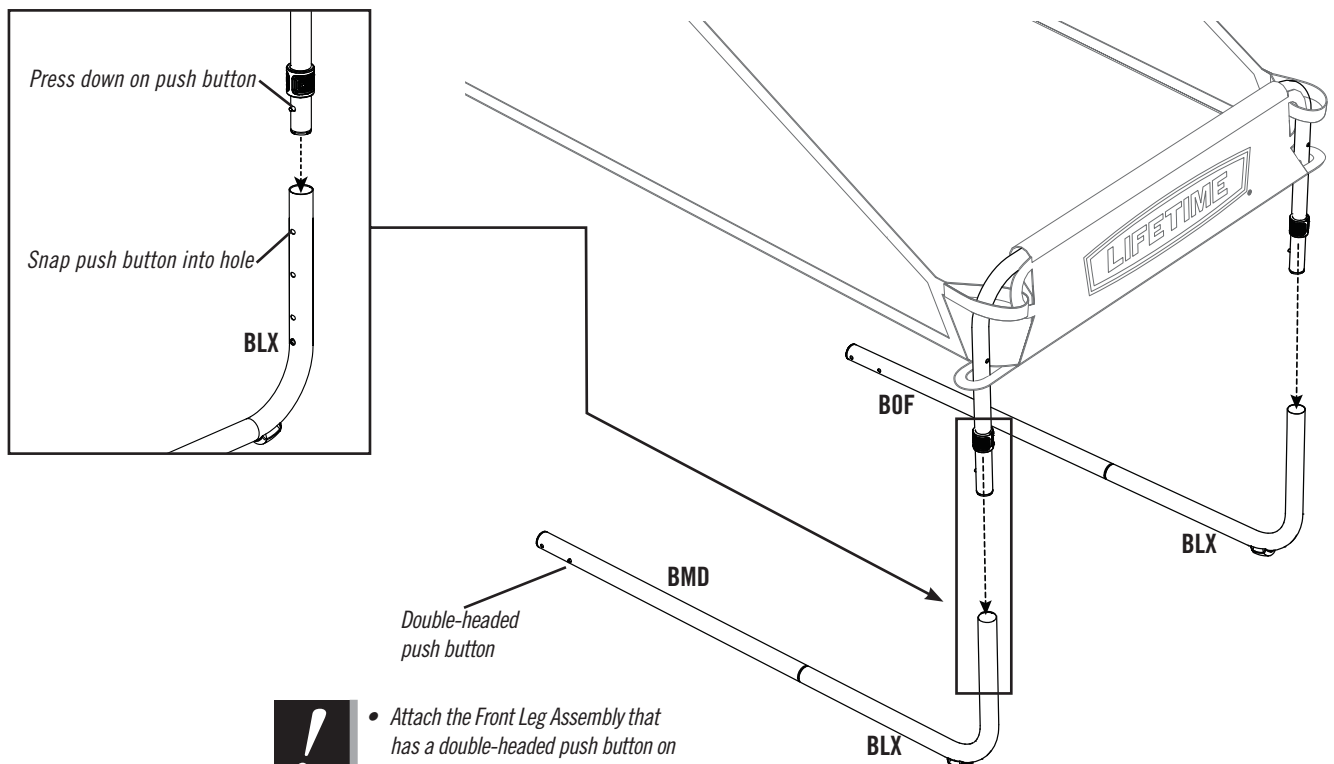


- Attach the Front Leg Assembly that has a double-headed push button on the left side of the system as shown.

SECTION 3 (CONTINUED)

 
TOOLS AND HARDWARE REQUIRED




EYF (x1)

 


BPW (x1)
9/16" (14 mm)

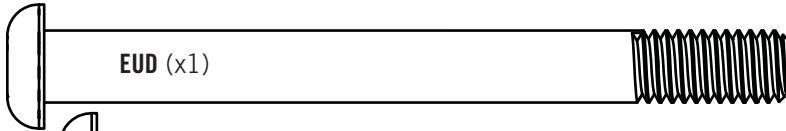 


EUD (x1)

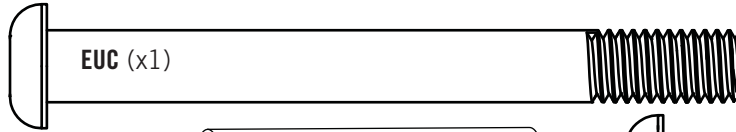 


EUC (x1)

 

EUR (x1)

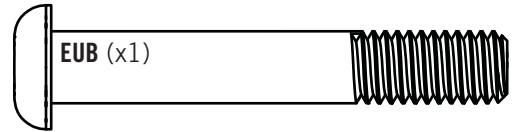 

EUB (x1)

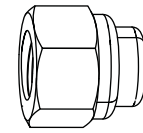 


EUA (x3)



BOB (x2)


3.4

 - Attach the Front Frame Assembly to the Rear Frame Assembly with the hardware shown. Press down on the double headed push button on the Front Leg Assembly on the left side of the system and insert the button into the holes indicated on the **Fold-up Plate (BLT)**.

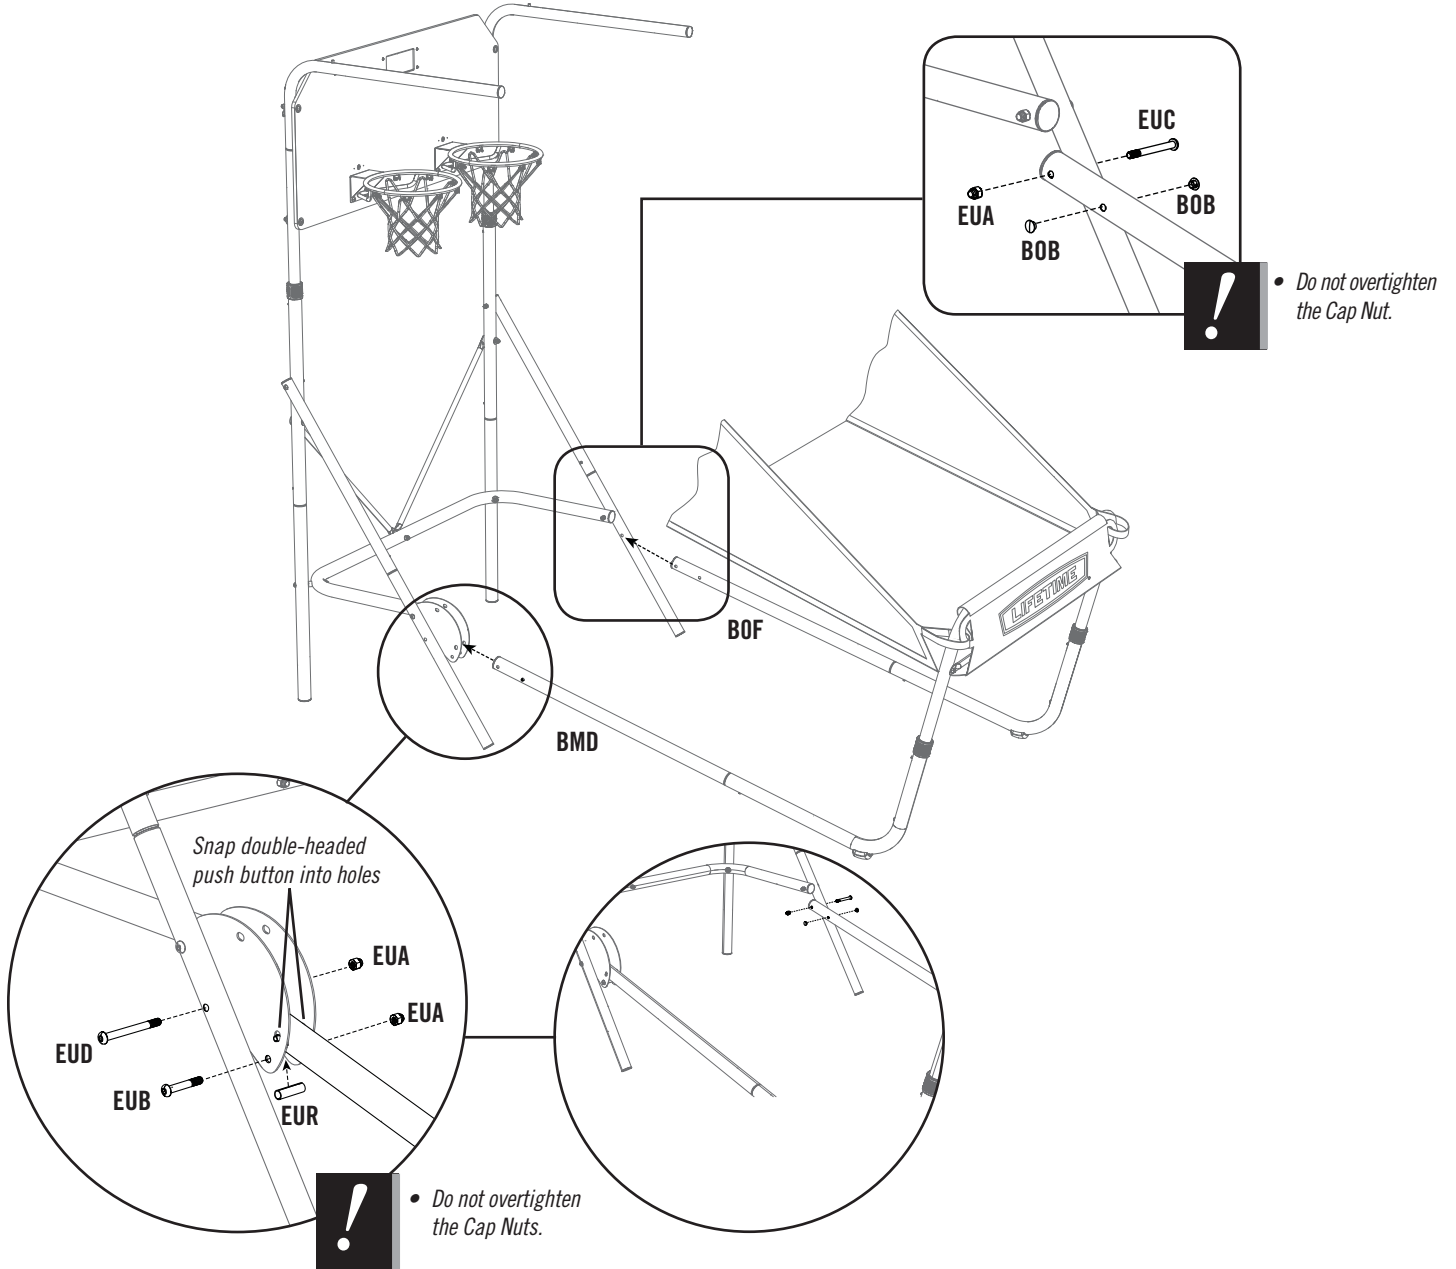


SECTION 3 (CONTINUED)

 
TOOLS AND HARDWARE REQUIRED




EYF (x1)

 


BPW (x1)
9/16" (14 mm)

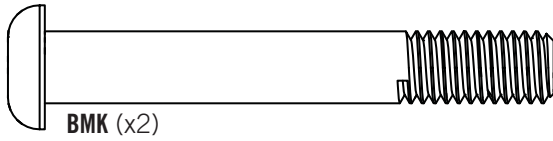 

BMK (x2)

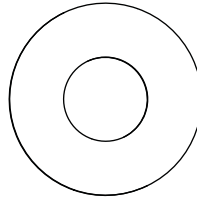 


ETZ (x2)

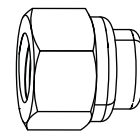 

EUA (x2)



3.5

 - Slide the **Ball Return (BLS)** over the **Top Arms (ETL)**. Hook the Upper Straps of the Ball Return under the **Retaining Hooks (BMN)** as shown.

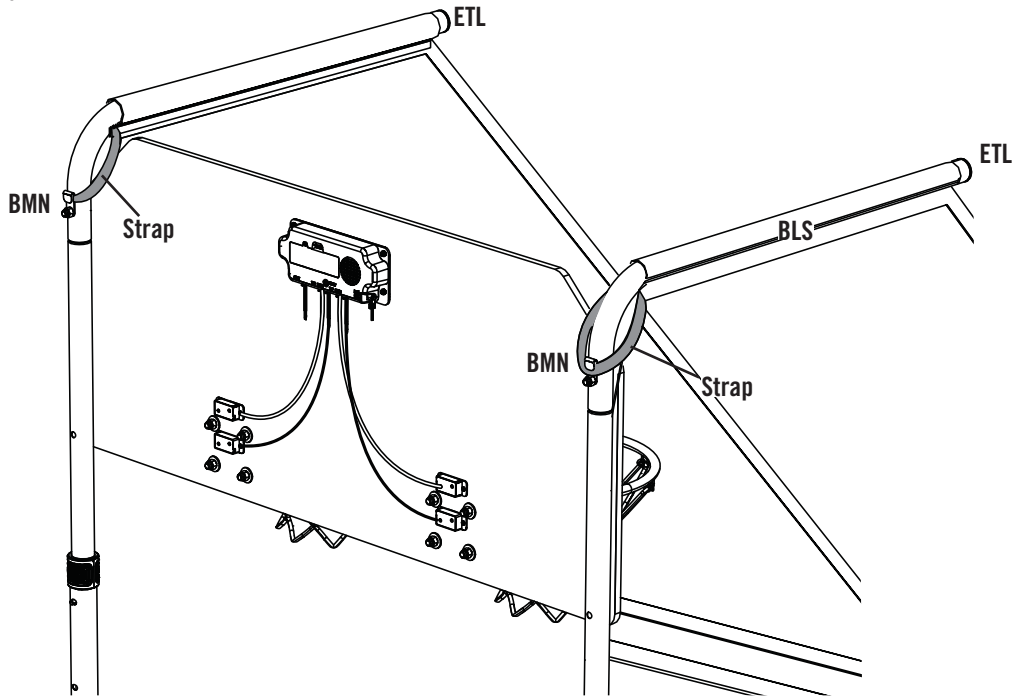

3.6

  - Slide a **Cross Bar (BLV)** into the sleeve of the **Ball Return Ramp (BLS)**. Secure the Cross Bar to the Rear Frame Assembly as shown, then connect the Lower Straps of the Ball Return Ramp as shown.

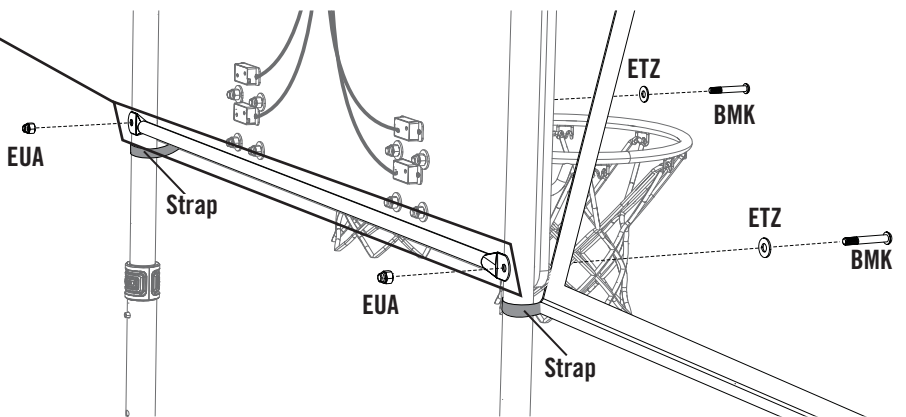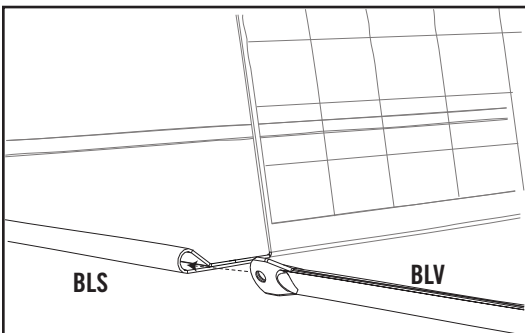


Do not overtighten the Cap Nuts.

SECTION 3 (CONTINUED)


TOOLS AND HARDWARE REQUIRED



 
EYF (x1)



BPW (x1)
9/16" (14 mm)

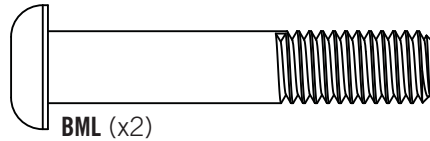 


BML (x2)

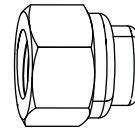 

EUA (x1)


3.7

 - Attach the **Cross Bar (BLV)** and the **Controller (EUQ)** to the **Lean Bar (BLW)** with the hardware as shown. The Controller may be installed on either side of the system.

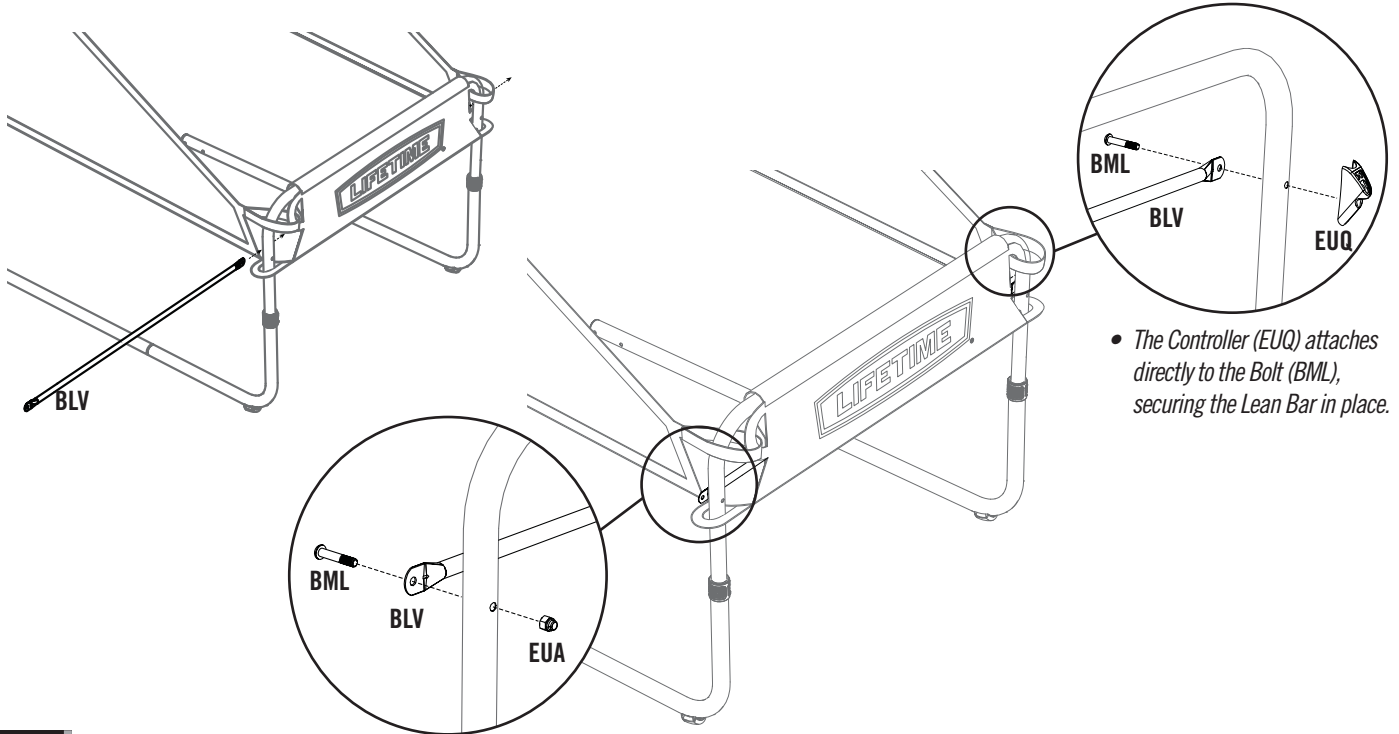

3.8

 - Connect the **Electronic Power Source (BLR)** to the **Electronic Scoreboard (BLQ)** as shown. The Scoreboard can also be powered by four AA batteries (not included).

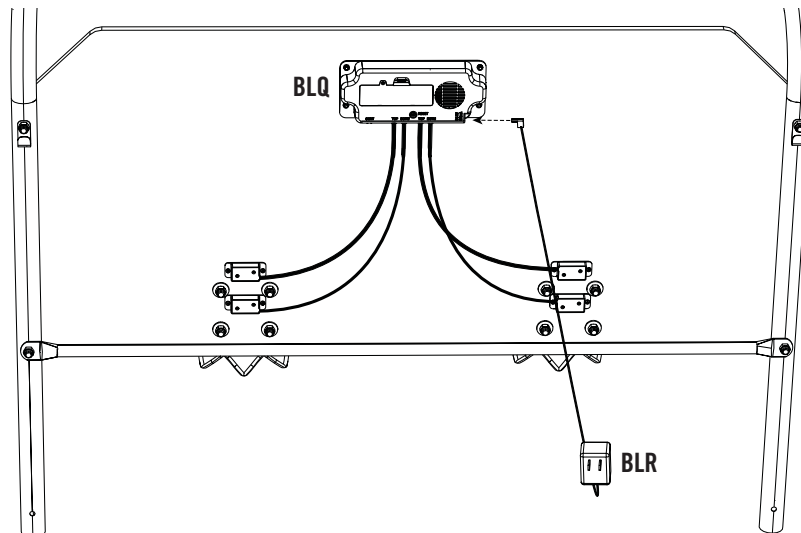


SECTION 3 (CONTINUED)

TOOLS AND HARDWARE REQUIRED




3.9

 - Run the cord for the **Controller (EUQ)** through the loops on the side of the Ramp. Plug the end of the cord into the remaining input in the Scoreboard.

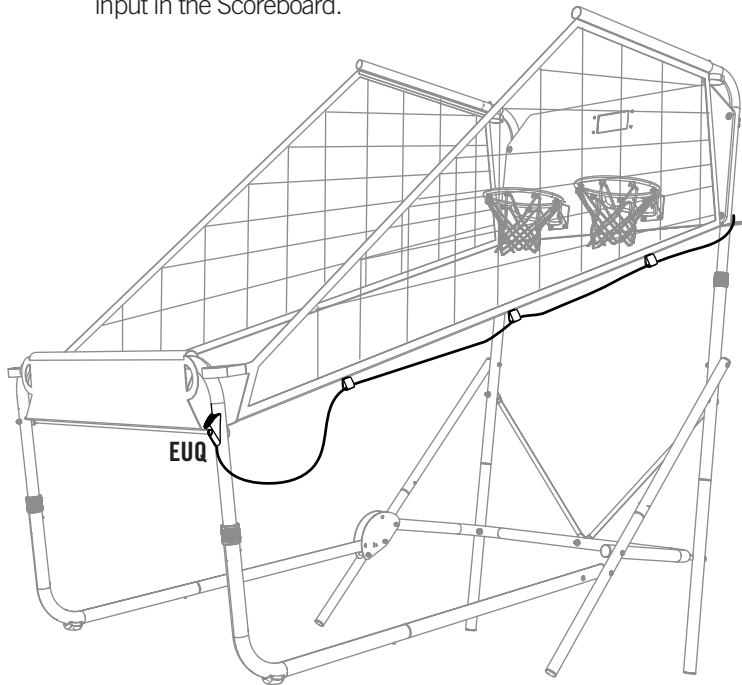

 
- The controller can be attached to the right leg or the left leg on the system. Loops are sewn into to both sides to accommodate your personal preference.

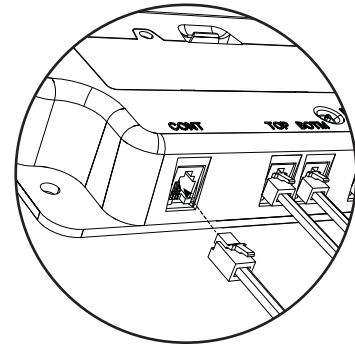

Electronic Scoreboard

3.10

 - Attach the **Needle** to the **Pump (BQB)** and moisten the Needle. Inflate the Basketballs.

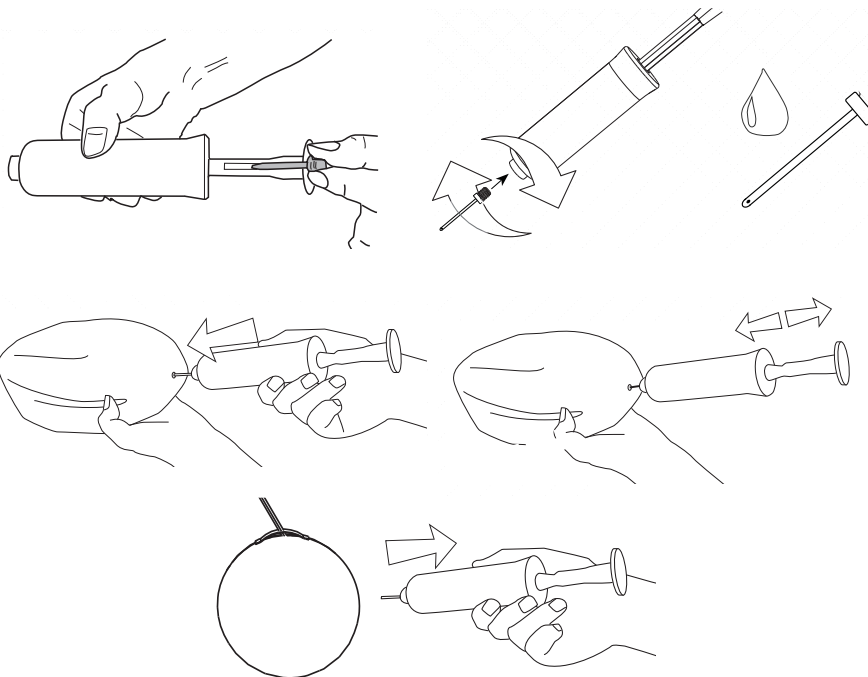

WARNING

Not to be used by children under 3 years of age due to small parts.



 
- Please read these instructions carefully before using this product. The inflation of this product must only be performed by an adult. Do not over-inflate. Basketballs may need to be periodically inflated.



ADJUSTING THE SYSTEM

1

- The Double Shot Arcade Basketball System can be adjusted to accommodate lower ceilings and younger players. To adjust the system, locate the Push Buttons shown below. Press the Push Buttons and slide the tubes to the desired height.

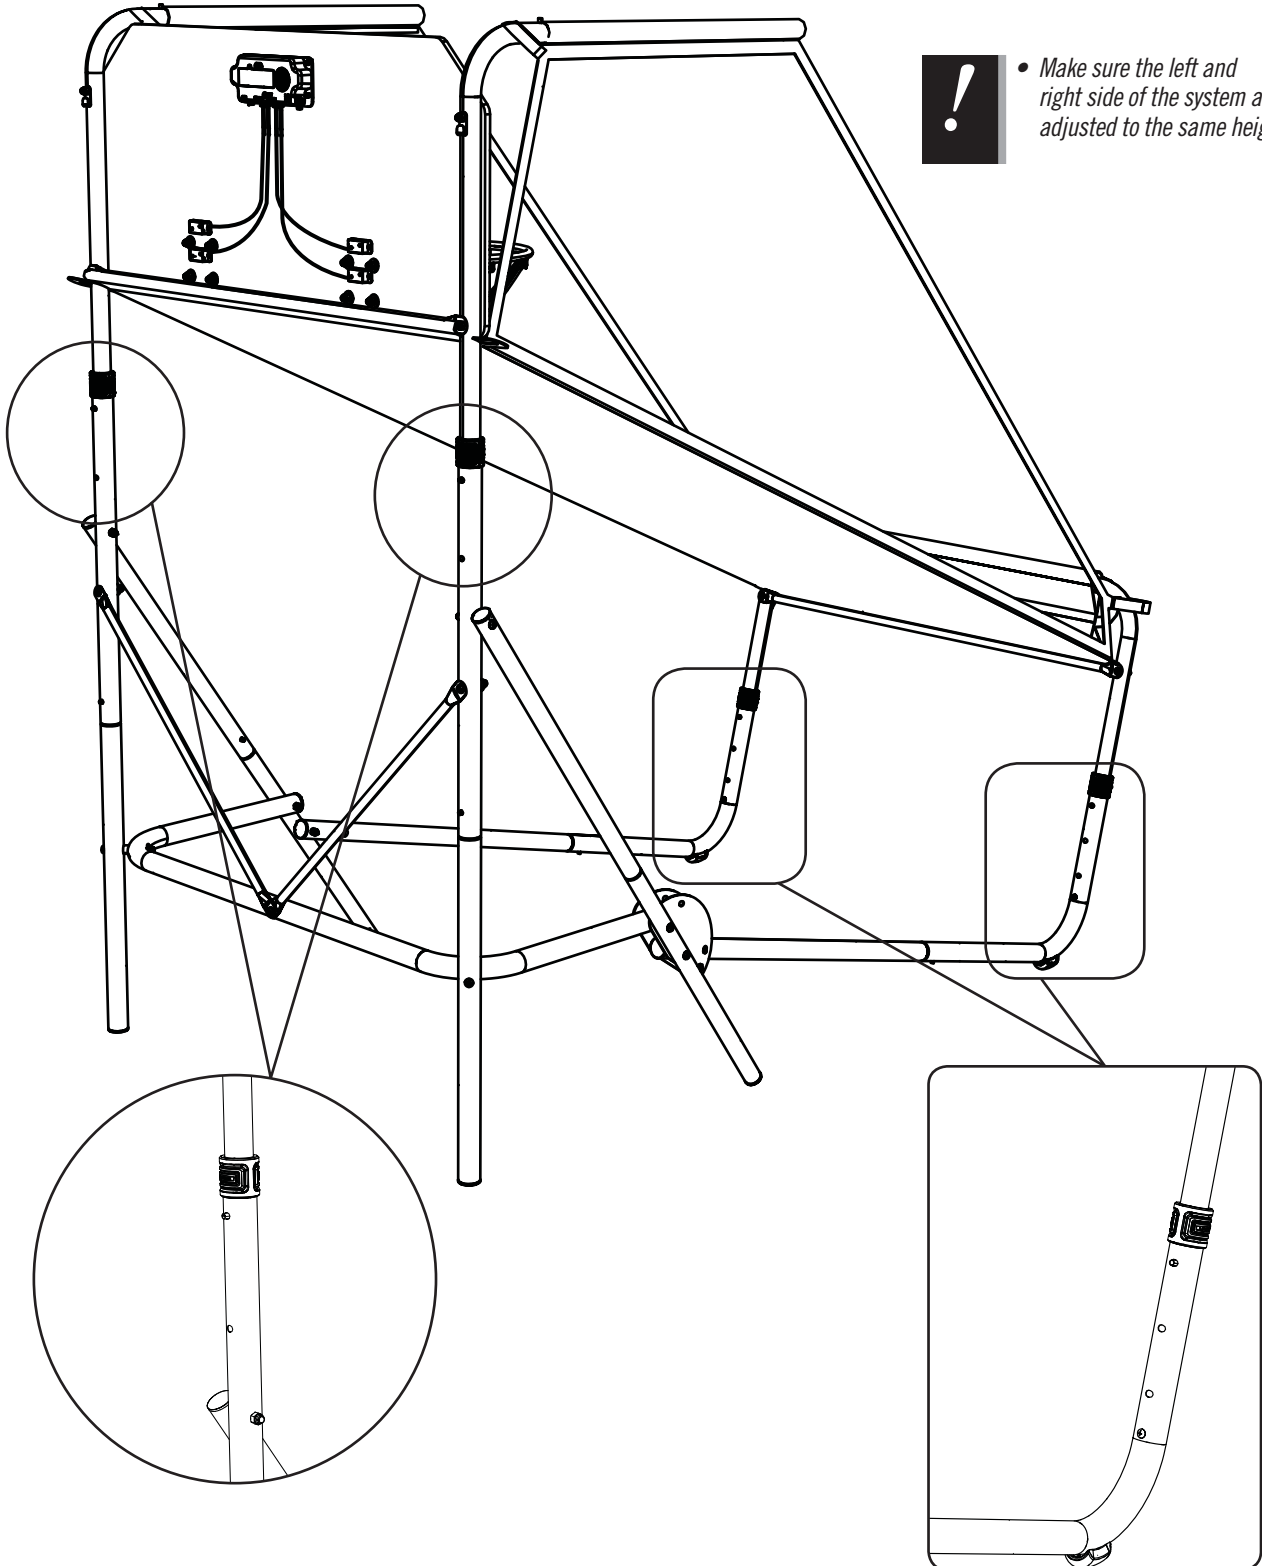



MAINTENANCE

The life of your basketball system depends on many variables. This system is intended for indoor use only. The climate, exposure to corrosives such as salt, pesticides, or herbicides, and excessive use or misuse can all contribute to failure of the electronics, metal tubes and plastic components, which may cause property damage or personal injury.

Check your basketball system frequently for loose hardware, excessive wear, and signs of corrosion. For safety reasons, and to prolong the life of your basketball system, you must take the following preventive measures:

- a. Check all Nuts and Bolts. If any are loose, tighten them.
- b. Check all parts for excessive wear and tear. If necessary, replace any parts that have been worn or damaged through usage. Contact our Customer Service Department for replacement parts.
- c. Inspect the Warning Stickers on the system. If they are ripped, faded, or illegible, call our Customer Service Department to request a replacement Sticker.
- d. Check all Pole sections for visible rust or chipped or cracked paint. If either are present, do the following:
 1. Use an emery cloth to completely remove any rust or chipped paint.
 2. Clean the area with a damp cloth and allow it to dry.
 3. Apply two coats of a rust preventative, high gloss enamel paint to the area. Allow the paint to dry between coats.

IF RUST HAS PENETRATED THROUGH THE POLES ANYWHERE, REPLACE IT IMMEDIATELY!



REGISTER YOUR PRODUCT ONLINE AT WWW.LIFETIME.COM

At Lifetime®, we are committed to providing innovative and quality products. While registering, you will have the opportunity to give us your feedback. Your input is valuable to us.

- You can also opt in to receive new product notifications or promotions.
- In the unlikely event of a product recall or safety modification, your registration provides the information we need to notify you directly.
- Registration is fast, easy, and completely voluntary.

LIFETIME'S PROMISE TO YOU:

Maintaining your privacy is our long-standing policy at Lifetime®. And you can rest assured that Lifetime® will not sell or provide your personal data to other third parties, or allow them to use your personal data for their own purposes.

We invite you to read our privacy policy at www.lifetime.com

REGISTER today!



WARNING STICKERS

- If a Warning Label or Sticker is illegible, destroyed or removed, contact Customer Service for a replacement.

WARNING
AVERTISSEMENT
ADVERTENCIA

- Do not climb on the structure of the Double Shot system.
- Ne pas monter sur le structure du système Double Shot.
- No subir en el sistema Double Shot 1173076

- The Warning Sticker is located on the Ball Return Ramp at the front of the system.



- The Pinch Warning stickers are located on the Fold-up Plates on the left side of the system near the bottom.

WARNING /
AVERTISSEMENT / ADVERTENCIA



Place one hand here when folding and unfolding the Double Shot system. Failure to do so may result in serious injury or property damage.


1173102

Placez un main ici lorsque vous pliez ou dépliez le système Double Shot. Le non-respect de cet avertissement peut entraîner des blessures graves personnelles ou des dommages à la propriété.

Coloque una mano aquí al plegar o desplegar el sistema Double Shot. El incumplimiento de seguir estas advertencias puede resultar en lesiones graves personales o daño a la propiedad.

- The System Fold-Up Warning sticker is located on the Side Rail with Push Button on the left side of the system near the bottom.

WIRING / CABLEADO / CÂBLAGE

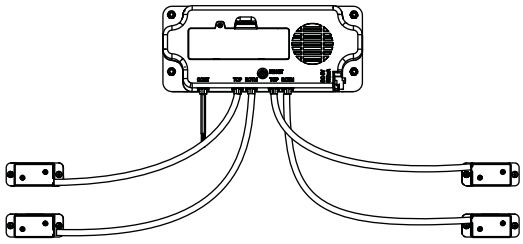

FOR INDOOR
USE ONLY

SÓLO PARA
USO EN
INTERIORES

POUR UN USAGE
INTÉRIEUR
SEULEMENT

1176741

- The Wiring Configuration Sticker is located on the back of the Backboard.



NOTES



NOTES



NOTES



90-DAY LIMITED FACTORY WARRANTY

THE MANUFACTURER RESERVES THE RIGHT TO MAKE SUBSTITUTIONS TO WARRANTY CLAIMS IF PARTS ARE UNAVAILABLE OR OBSOLETE.

1. Lifetime basketball systems are warranted to the original purchaser to be free from defects in material or workmanship for a period of ninety days from the date of original retail purchase. The word “defects” is defined as imperfections that impair the use of the product. Defects resulting from misuse, abuse or negligence will void this warranty. This warranty does not cover defects due to improper installation, alteration or accident. This warranty does not cover damage caused by vandalism, rusting, “acts of nature” or any other event beyond the control of the manufacturer.
2. This warranty is nontransferable and is expressly limited to the repair or replacement of defective product. If the product is defective within the terms of this warranty, Lifetime Products, Inc. will repair or replace defective parts at no cost to the purchaser. Shipping charges to and from the factory or distribution center are not covered and are the responsibility of the purchaser. Labor charges and related expenses for removal, installation or replacement of the basketball system or its components are not covered under this warranty.
3. This warranty does not cover scratching or scuffing of the product that may result from normal usage. In addition, defects resulting from intentional damage, negligence, unreasonable use or hanging from the rim will void this warranty.
4. Liability for incidental or consequential damages is excluded to the extent permitted by law. While every attempt is made to embody the highest degree of safety in all equipment, freedom from injury cannot be guaranteed. The user assumes all risk of injury resulting from the use of this product. All merchandise is sold on this condition, and no representative of the company may waive or change this policy.
5. This product is not intended for institutional or commercial use; Lifetime Products, Inc. does not assume any liability for such use. Institutional or commercial use will void the warranty.
6. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
7. This warranty is expressly in lieu of all other warranties, expressed or implied, including warranties of merchantability or fitness for use to extent permitted by Federal and state law. Neither Lifetime Products, Inc., nor any representative assumes any other liability in connection with this product. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

PLEASE INCLUDE YOUR DATED SALES RECEIPT AND PHOTOGRAPHS OF DAMAGED PARTS.

REPORT PRODUCT DEFECTS IN WRITING TO:

Lifetime Products, Inc., PO Box 160010 Clearfield, UT 84016-0010
or call 1-800-225-3865 M-F 7 a.m. to 5 p.m. MST.

REGISTER YOUR PRODUCT FOR QUICKER CUSTOMER SERVICE.

Visit www.lifetime.com or call 1-800-225-3865 to register your product today.

FOR INTERNATIONAL WARRANTY CLAIMS:

All warranty claims must be accompanied by a sales receipt. Report all warranty claims in writing to your regional sales support representative. Please include your dated sales receipt and photographs of damaged parts. To identify the representative for your region, please visit: www.lifetime.com/international



www.lifetime.com

ENHANCE YOUR LIFETIME® PURCHASE BY ADDING ACCESSORIES OR OTHER GREAT PRODUCTS

To purchase accessories or other Lifetime® products, visit us at:

www.lifetime.com

Or call: 1-800-424-3865

7:00 am–5:00 pm (M–F) MST and 9:00 am–1:00 pm Saturday MST



www.lifetime.com

