



OWNER'S MANUAL



SPEEDBALL

www.wik.pl



WIK Sp. z o.o.

ul. Dworska 82

Kostkowice

43-426 Dębowiec

POLAND

tel: +48 33 8577110

email: wik@wik.pl


Congratulations on purchasing the WIK Speedball table- a guarantee of a great fun and high income! This manual will help you to assemble, safely use, customize your speedball, and insure your table's maximum earning power and player appeal over the years to come.

Index

1. Assembly.
2. How to play?
3. Warnings!
4. Maintenance tips.
5. Software description.
6. Warranty terms and conditions.

1. ASSEMBLY

Package contains complete machine. Unwrap it, find keys and open the lock on the side of the cabinet. There you will find four legs and accessories that will help you to assemble your speedball. Insert legs into the holes and screw bolts. Plug in the device.

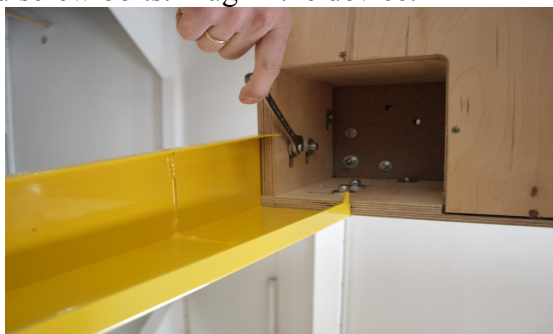

2. HOW TO PLAY?

To start a play insert a coin(s)/note into the acceptor. There will appear a number of received credits at the display. Push the START button. The game will finish after a set time or after one of the players scores a given number of goals. The aim of each player is to place a ball into opponent's goal. In order to score a player needs to squeeze the handles, what will activate paddles which will perfectly hit the ball.

3. WARNINGS!

- a). All metal parts are connected together and the machine must be plugged into the socket with earthing AC 230 V 50 Hz.(or 110 V for US version) Only this assembling makes the play safe and the machine works properly.
- b).The appliance should be connected only to a power supply provided with a differential switch.
- c).The appliance will be entirely disconnected from power supply only when unplugged from the socket.
- d).Please ensure that the power supply cable does not come into contact with water.
- e).Please do not attempt to extend the power cable on your own. Extension cords should not be used.
- f).The appliance must not be used when directly exposed to water (rain, flooding etc.). Should this happen, the appliance must be unplugged (remove the plug from the socket).
- g) Speedball's top is made of tempered glass. It is safe but not unbrakable so do not let players to walk over it or hit it with heavy objects.

4. WIK SPEEDBALL' MAINTENANCE TIPS

1. **CLEANING the TABLE** - We highly recommend to clean the glass top once a week, or more if necessary. Use a small amount of any liquid window cleaner on a clean paper towel to clean off dust and greasy marks left by the players. The playfield naturally tends to cover up with tiny marks made by a bouncing ball. Most of them can be eliminated by the same cleaning method. In order to clean the playfield unscrew the glass top and move it carefully from the table. After you finish the cleaning make sure that it is fixed properly again. Keeping your device clean is very important; a dirty table can discourage players and significantly reduce earnings.

2. **PROPER LIGHTING** -The table is equipped with LED lightning placed underneath the playfield what makes it well - and evenly – lit. No type of lightning is never-ending, so please make sure that you exchange the lightning after it stops working. Good lighting is very important; a dimly-lit table can discourage players and significantly reduce earnings.

5. SYSTEM SOFTWARE DESCRIPTION

The machine is pre-set and ready to work. To change the settings open the machine , rise the playfield and block it by using the metal bracket. Enter the MENU by keeping “+” and “-” buttons on the mainboard pressed simultaneously for 10 seconds. You will be asked to enter the code. Enter the default code: **1111** by using “+” , “-“ and “OK” buttons. Now you can move to the option you want to programme (e.g. 01, 05, 17) by pressing “+” or “-“ buttons accordingly. By pressing „OK” you confirm an entry to a particular option. Press “+” or “-“ button to change the setting of a given option. The new parameters are shown on the display. By pressing “OK” you confirm changes. By pressing “+” or “-“ buttons you can move to another option.

IMPORTANT! :After entering the MENU all unused credits will be cancelled (but they will be counted by the meters).

Options:

OP 00 – SERIAL NUMBER.

OP 01 – TOTAL CASH

Non-resetable counter (it is not possible to change).

OP 02 – DAILY CASH

Resetable counter. Press “OK”, “+”, “OK” buttons to reset it.

OP 03 – LANGUAGE

Select your language. Available languages: English, German, Polish, Greek

OP 04 – GOALS NUMBERS

Set the maximum number of goals for a game (0 - 99 goals; 00-no limit)

OP 05 – GAME TIME

Set the maximum game time (0 - 58 min 50 sec.; 00-no limit)

OP 06 – BRIGHTNESS

Modulate display's brightness

OP 07 – VOLUME (1 – 99)

To adjust the volume use “+” and “-“ buttons.

OP 08 – TYPE OF MUSIC

Select the type of music that is played during the game.

OP 09- MOTOR TEST

It is correct when it moves while testing

OP 12 OPTICS TEST

Symbol of open gates:(-/- -/-)When you cover one of the optics it should change: f.ex.--- -/-

OP 13 – DISPLAY TEST

Display works correctly if it shows all 8's while testing

OP 14 – AUTOSTART TIME

Set the time period after which another game starts automatically (in case there are any credits left).
AUTOSTART TIME is active if OP 19 setting is “AUTO”

OP 16 – MUSIC INTERV.

Set the time period between demo tunes played in demo mode

OP 17 – IMPULSE FACTOR

Impulse multiplication (usually should be set on 1).

OP 18 – GAME COST

Price of the game – how many impulses send from coin selector is necessary to get one credit (game) (01 – 99; „free” - free play - coin selector doesn't accept the coins).

OP 19 – AUTOSTART

There are two options:

“AUTO” – in case there are some credits left next game starts automatically after time set in OP 14.

“NOR” – to start another game the player has to push the START button.

OP 20 – MENU CODE

This option allows to change the default code required to enter the MENU.

In case of losing the new code please contact the producer or a distributor.

OP 21 – CHANNEL SETT.

Settings for a coin validator working in a parallel mode.

Factory settings(for PLN and EUR):

CH 01 impulse 01 bonus 00

CH 02 impulse 02 bonus 00

CH 03 impulse 05 bonus 01

CH 04 impulse 01 bonus 00

CH 05 impulse 02 bonus 00

CH 06 impulse 04 bonus 00

1 impulse=1 game, bonus= free game

OP 22 – BONUS

Settings for coin validator working in serial mode. First numbers regard number of impulses required to get a bonus and second numbers regard quantity of bonus games that will be given.

OP 23 – COIN SELECTOR TEST

In order to test the coin selector- insert a coin. Display shows which PIN and how many impulses go to the CPU board.

OP 26 – LED BLINK

Select optimal combination of LED blinking.

OP 27 – LED BLINKING MODE

(choose AUTO or MANUAL mode)

OP 29– DEAFULT SET

Restore the factory settings

OP 30 – SOUND

Restore the factory sound settings

OP 31 – LIGHT LEVEL

Modulate lightning

OP 35 – TICKETER (tickets dispenser):

settings for a ticket dispenser used by WIK:

- **ticketer** 1(2 if there are 2 ticket dispensers installed)

- **time** (75 ms- how long ticket does slip out- change the time if more or less than one ticket is slipped out)
- **per game** (choose this option if you want to give a ticket for each game)
- **per goal** (choose this option if you want to give a ticket for each goal)

OP 36 – OPT. ERR ALARM

in order to turn on or optics error alarm select (off/on)

6. WARRANTY TERMS AND CONDITIONS

a) All of WIK products are designed and manufactured according to best standards and they guarantee high quality, simplicity of use and assembly. In case of any trouble we advise to read the instruction and information published in technical support section on our website : www.wik.pl

b) Warranty rights are entitled to purchasers of WIK products and are based on an invoice or receipt. WIK products are under warranty for:

- 24 months starting from the date of purchase made by consumers for non-commercial use
- 12 months starting from the date of purchase made by company for a commercial use

c) In case the product appears to be faulty WIK Sp. z o.o. hereinafter called WIK, will organize repair in order to restore the functionality of the product.

d) If any defects due to faulty materials and / or workmanship appears during the warranty period WIK will arrange repair free of charge. Repair in the first place is organized through consultation by telephone or e-mail and sending spare parts to replace defective items. In case of replacement of parts / components the beginning of the warranty period for this part shall be the original date of purchase. WIK warranty covers only products used for their intended purpose according to the information published in the manual.

e) Beneficiary of the warranty is not entitled to claim compensation of the lost benefits for the period in which the unit under warranty fails to operate properly. WIK is not responsible for any damage to property or person caused by improper use of the WIK products.

f) WIK warranty does not apply in the following cases :

- purchasing documents have been altered in any way or made illegible
- model and / or serial number (if available) has been altered, removed or defaced .
- repairs or modifications have been made without consulting WIK service department
- product is used contrary to its purpose
- damage is caused by improper use of the product or environmental conditions do not comply with the recommended operation.
- damage is caused by improper connection of equipment ,additional equipment or accessories other than those recommended by WIK.
- the damage was caused by an external force (including lightning, surges in the power supply, fire, natural disaster)or during transport.
- the product is defective due to the decline in the quality of items that are subject to natural wear and tear or damage to the parts subject to natural scratching .
- natural wear and tear of consumable parts or accessories such as lighting , gaskets , pucks, mallets, hammers or contacts
- defects or damage caused by accident, rollover, product's fall, mechanical damage caused by the users intentionally abusing physical force in the game
- defects and damage resulting from improper use of accessories to play
- defects or damage due to changes in the original form and/or function of the product specified in the product's manual
- defects caused by incorrect connection , use, or storage of the product

g). Any defect should be reported in writing, or via e-mail sent to the WIK service department immediately, not later than seven days from the date of detection. Complaints made of non-compliance procedures and time limits set forth in this warranty will void the warranty and will not be considered.

h). The removal of the identified defects must be made within not more than 14 days from the date of notification to

WIK service department. If it happens that due to the incorrect diagnose of failures problem remains unsolved, a 14-day period is counted again from the date of re-application.

i).Parts removed as a part of warranty service remain the WIK property and beneficiary of the warranty is obliged to return them immediately (in person at the WIK premises or by sending by a courier at their own cost). Failure to return the exchanged part within 30 days of the dispatch of spare parts / repair will form the basis for the invoice in the sum of the equivalent of spare parts.

j) For warranty repair shall be considered only repair of a defective product made in the warranty period and under the conditions of this warranty. Any other activities such as: maintenance, periodic inspection, adjustment, checking and cleaning of the product will not be treated as a warranty repair.

k) Product is not under the warranty in case of:

- failure to report defects immediately upon discovery, but not later than seven days from the date of detection;
- failure to follow product's manual in the operation, maintenance and adjustment of the product;
- failure to comply with the mandatory terms of guarantee of the product,
- any modification of the Product without the prior consent of the WIK,

j) WIK has the right to refuse warranty service if the purchaser is in arrears with payments, regardless of their title, in particular default of payment for goods delivered by WIK to the Purchaser or service provided by WIK. In the case referred to in this section, WIK may refuse to perform any services under the guarantee and is exempt from liability to the purchaser under warranty.

k) Only products purchased directly from WIK or its authorized dealers are under warranty. Further disposal of the product does not transfer rights under this warranty to a subsequent purchaser.